



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77160 SATIN FINISH
&
950-78160 CHROME FINISH
CHEVY HEAVY DUTY
2001
SPEED GRILLE INSERTS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST

24	Attaching Clips # 71097	1	Instruction Sheet	1	Upper Speed Grille Section
1	Got Street Scene Decal	1	Street Scene Emblem	1	Lower Speed Grille Section

TOOL LIST

Screwdrivers, Sockets, Ratchet, Cutting Tool (Coping Saw, hack Saw Blade) Sand Paper

1. Remove the factory grille shell from vehicle. Refer to shop manual if guidance is needed.
2. Cut out the X grids in the grille shell. Sand smooth.
3. Install the Speed Grille inserts into their openings. Clip from the back side using 6 clips across the top and 6 clips across the bottom of each insert. Install clips with the flat side away from grille insert.
4. Install grille shell back into vehicle.
5. Install the Street Scene Emblem on the grille face. Remove the protective cover.

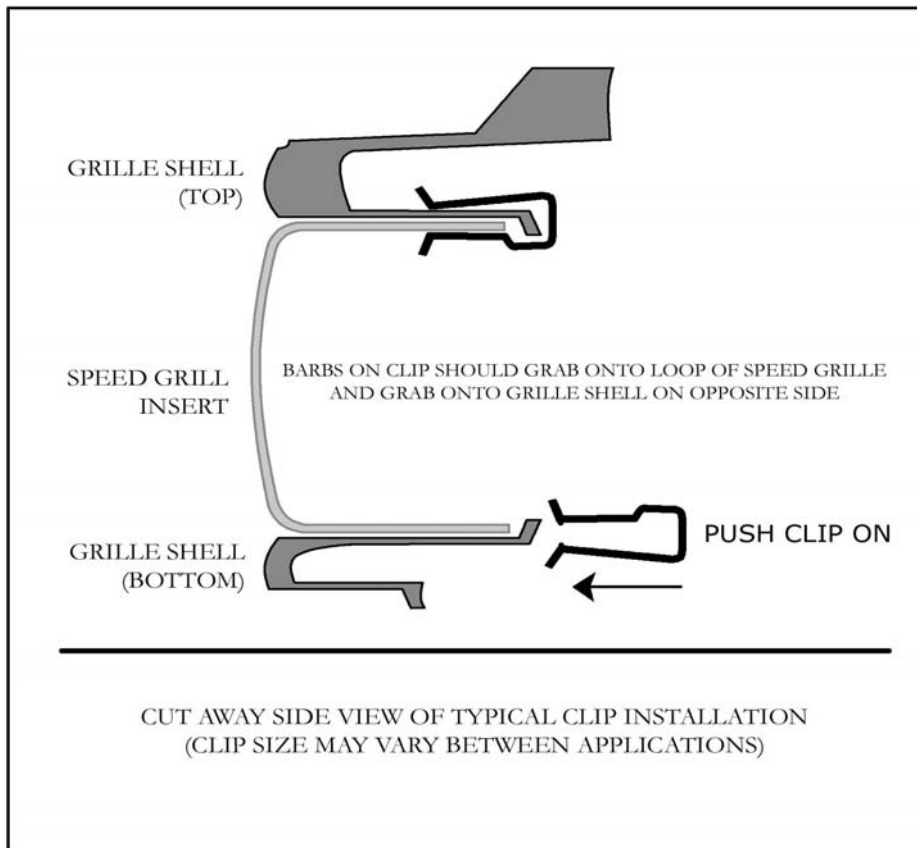

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

8/3/01 SSE 950-77160 & 78160