



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, CA. 92626
Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77164 SATIN FINISH
&
950-78164 CHROME FINISH
SPEED GRILLE INSERTS
2001 - 2002 CHEVY SILVERADO
HD
OEM LOWER VALANCE


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
2	Speed Grille Sections	1	Instruction Sheet	16	Attaching Clips # 71099
		1	Street Scene Emblem		

TOOL LIST	
NONE	

1. Remove Speed Grille sections from their packages. Each grille is marked for it's proper location and position.
2. Install Speed Grilles from the front side of valance and attach from the inside, with the clips provided. Position clips at each end, and to the right and left of the vertical bar. Make sure grille is installed fully into the opening.

TYPICAL CLIP INSTALLATION

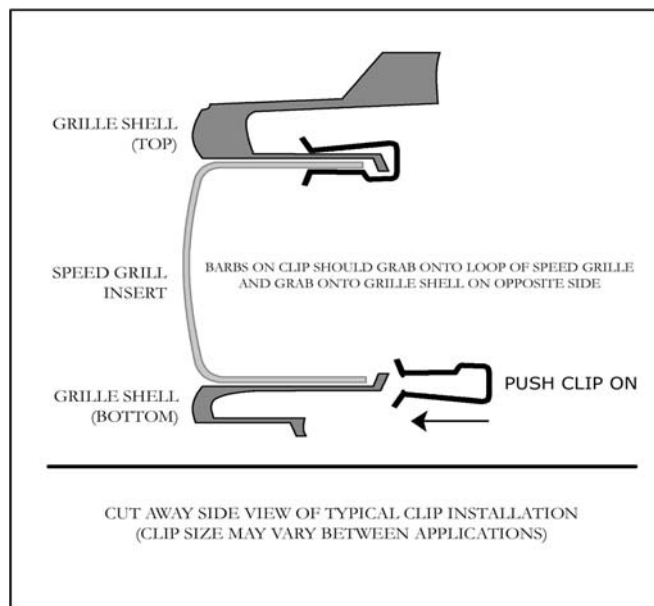

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

04/27/04 SSE 950-77164 & 950-78164