



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, CA. 92626  
Phone (714) 426-0590 Fax (714) 426-0591

### INSTALLATION INSTRUCTIONS

950-77203 SATIN FINISH  
&  
950-78203 CHROME FINISH  
SPEED GRILLE  
94-97 CHEVY "S" SERIES  
WITH SSE VALANCE  
950-70203

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation. Installation time is approximately 1/2 hour.


#### PARTS LIST

1	Speed Grille Section	1	Instruction Sheet	12	Attaching Clips # 71098
		1	Street Scene Emblem	1	Got Street Scene Decal

#### TOOL LIST

None required

1. Before beginning installation be sure to wear proper eye protection.
2. If you are installing the SSE 950-70203 valance, install the "Speed Grille" into the valance before installing the valance onto the truck. If valance is already installed, It is not necessary to remove it to install the "Speed Grille" insert.
3. Remove the "Speed Grille" from it's protective package.
4. Slide the "Speed Grille" into the opening making sure the grille is centered. **Note:** the top and bottom sides are the same.
5. Attach the "Speed Grille" to the valance by sliding the clips over the valance and "Speed Grille" from the back side.
6. Locate the clips at the outer most ends and equally across the grille. Use six clips along the top and six along the bottom sides.
7. Make sure the grille is securely attached.

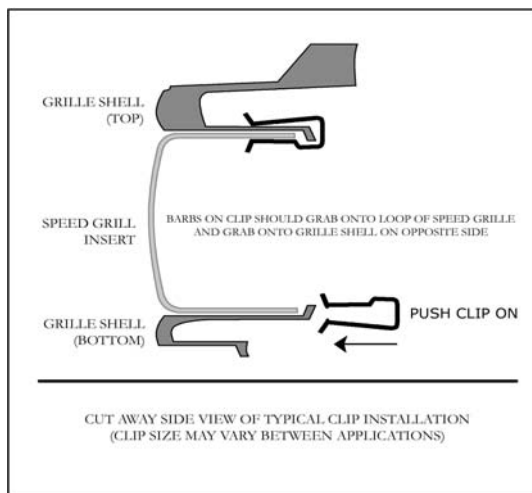

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.