



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, CA. 92626  
Phone (714) 426-0590 Fax (714) 426-0591

### INSTALLATION INSTRUCTIONS

950-77250 SATIN FINISH  
&  
950-78250 CHROME FINISH  
SPEED GRILLE  
98-2000  
CHEVY " S " SERIES  
& BLAZER  
W / HORIZONTAL GRILLE BARS

**Note:** Will not fit grill with lattice type grill center. Use SSE Part Number 950-78220

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
2	Speed Grille Section	1	Instruction Sheet	16	Narrow Attaching Clips # 71098
1	Got Street Scene Decal	1	Street Scene Emblem	6	Wide Attaching Clips # 71096
6	Spacer Clips	2	Self Drilling Screws # 6 X 1/2"		


TOOL LIST
Safety Glasses, Phillips Screwdriver

Note:
No cutting, Drilling or Grinding Required

1. Before beginning installation be sure to wear proper eye protection.
2. Open hood. Remove the park turn signal lamps. Holding the lamp assembly in one hand, depress the lever on the bulb assembly and turn counter clockwise to remove.
3. Remove the grille shell assembly by grasping the upper portion and pulling gently to release the retaining clips. Do the same on the lower portion and remove grille shell from truck.
4. Set the grille shell on a soft covered clean work bench or table. Remove Speed Grille sections from their packages. Each Speed Grille section is labeled for it's location.
5. Place the upper Speed Grille section into the upper opening of the grille shell. Push the grille all the way in. Using the narrow attaching clips, clip the lower side of Speed Grille at the center to the right and left of the "bow tie", at each outer end and centered between. Using the narrow attaching clips, clip the top side directly above the lower clips at the center, and 3" to the right and left of the center clips. Attach again at the outside corners. Clips should be installed with the flat side facing away from grille. To secure the top outside corners, use the self tapping screws provided and screw into the top horizontal bar at the sides ( next to headlight ) thru the long loop on the grille insert, Keeping the screw as close to the end of the loop as possible to keep the grille insert tight against the bars. Do not over tighten.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6. Place the lower Speed Grille into the opening. The upper side of Speed Grille is marked with six red triangles. Mark the exact location on the upper horizontal bar. Remove the Speed Grille section. Using the six spacer clips ( dark gray finish ) install them on the top horizontal bar where marked, using the short clip side on the horizontal bar ( large side will be facing up. It may be necessary to gently tap the clips onto the bar ). Install the lower Speed Grille back into the lower opening and over the top of the spacer clips. Using the six wide attaching clips, clip over the spacer clip at each point with the flat side facing up. See illustration.

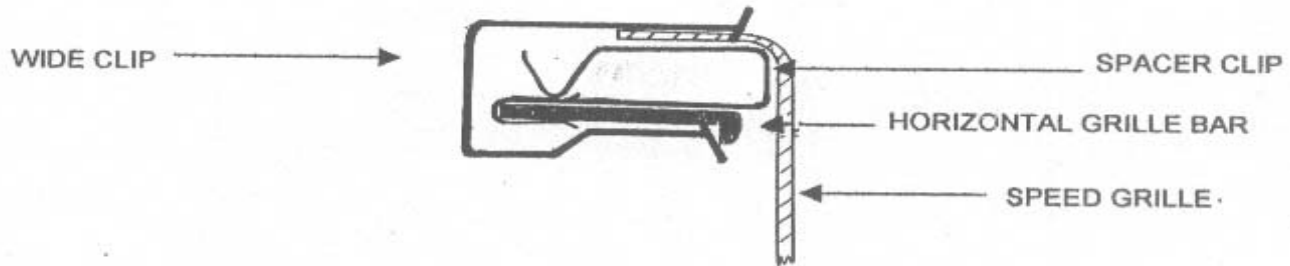

Push grille all the way in. Using the narrow attaching clip, attach the lower side of the " Speed Grille " at the center to the right and left of the " Bow Tie " and at each end one centered between.

7. Re-install grille into truck.

