



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76327 BLACK CHROME
950-77327 SATIN FINISH
950-78327 CHROME FINISH
2009
NISSAN MAXIMA
LOWER VALANCE
GRILLE INSERT


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	12	Installation Clips # 71099
1	Care For Grilles	1	Street Scene Emblem		


TOOL LIST	
Flat Blade Screwdriver	

1. Remove the Speed Grille insert from the poly tube container.
2. NOTE the curved corners of the Speed Grille on the one side. This side will face up.
3. Set the Speed Grille into the opening. Push the top & bottom sides past the painted edge and into the black grids.
4. Raise the front of vehicle to gain access to the under side of vehicle.
5. Remove the lower air deflector to gain access to the back side of opening. Pry up the center pin in fastener with a flat blade screwdriver, then pry out the body. Save all fasteners.
6. " Clip " the Speed Grille insert to the valance using the clips provided. See the illustration below for an outline of how the " clip " will attach to the valance and the Speed Grille insert.

TYPICAL CLIP INSTALLATION

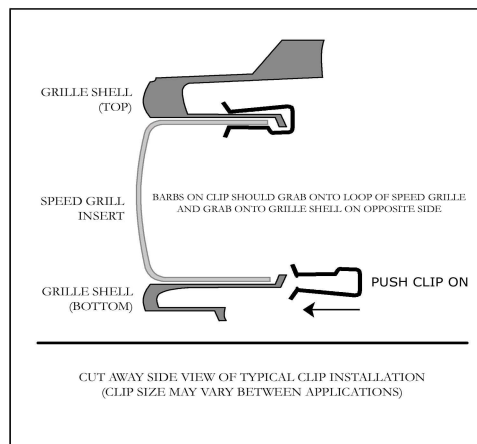

7. Install the clips provided and position as shown in the illustration below.

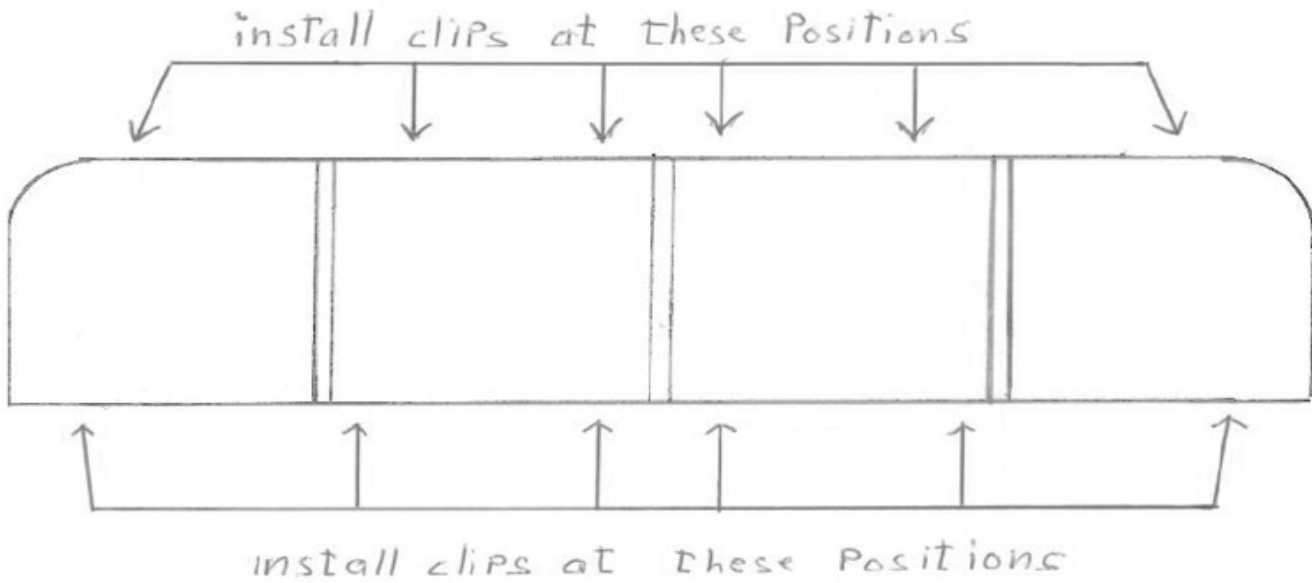

8. Re-install the air deflector panel removed in step 5, using the fasteners that were re-moved. DO NOT leave panel off.