



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77346 SATIN FINISH
&
950-78346 CHROME FINISH
2004
NISSAN
TITAN / ARMADA
BUMPER GRILLE


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem	3	Push In Fasteners P.N. 18379

TOOL LIST	
Drill Motor, 1/4" Drill Bit	

1. Insert the Speed Grille into the bumper opening. Follow clipping procedure as shown in illustration and clip the top side of Speed Grille to the black ABS insert in the bumper. Use two clips in the center and one toward the end on each side.
2. Push the bottom of Speed Grille in and note the location of the holes in grille to the black ABS insert. Mark the location at each end and the center. Remove Speed Grille and drill a 1/4" hole at each location.
3. Re-clip Speed Grille on the top side and fasten the bottom side by inserting the push in fasteners through the hole in grille and into the holes drilled.

TYPICAL CLIP INSTALLATION

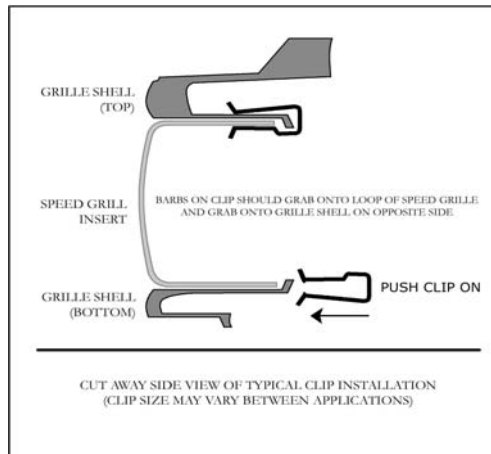

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.