

## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591

## INSTALLATION INSTRUCTIONS

950-77555 SATIN FINISH
&

950-78555 CHROME FINISH
2003 - 2004
CHEVY SILVERADO
GRILLE SHELL
WITH NO BOW TIE
& INSERTS


**VERY IMPORTANT!** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST						
2	Speed Grille Inserts	1	Instruction Sheet	8	Installation Clips # 71096 ( Wide Body )	
1	Grille Shell	1	Street Scene Emblem	12	Installation Clips # 71098 ( 3/4" Long )	
1	Fiberglass Prep. Sheet	1	Care For Grilles	6	Installation Clips # 71097 ( 1/2" Long )	

TOOL LIST	
Flat Balde Screwdriver	

- 1. Open hood. Remove the panel between the grille and core support by removing the retainers. To do this pry up the center pin and pry out the outside of retainer. Save all retainers.
- 2. Remove grille shell from vehicle by gently pulling the grille shell to release the retainers located at each end below headlamps and thefour surrounding the chrome perimeter of grille. If you are not sure of their locations use the Street Scene smooth grille shell as a guide.
- 3. Install Speed Grille into openings. Using the illustration as a guide, clip the grille to the shell. Use eight 71096 clips across the top and six 71097 clips across the bottom of the upper grille section. On the lower section use six 71098 across the top and six 71098 clips across the bottom.
- **4.** Remove the metal retaining clips on the factory grille shell and install on the Street Scene grille shell. It may be necessary to sand the mounting surface a little to install clip.
- 5. Install grille shell to vehicle. Install panel removed in step

## TYPICAL CLIP INSTALLATION

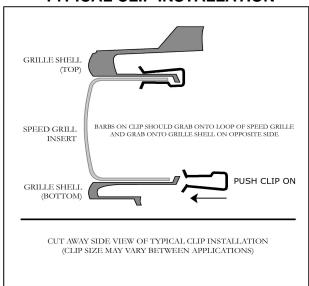

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.