



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-77613 SATIN FINISH
 &
 950-78613 CHROME FINISH
 SPEED GRILLE
 VALANCE INSERT
 1997 - 2000
 DODGE DAKOTA W/OEM
 FRONT VALANCE

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation. Installation time is approximately 20 minutes.

PARTS LIST					
4	Speed Grille Sections	1	Instruction Sheet	16	Attaching Clips # 71098
		1	Street Scene Emblem	1	Got Street Scene Decal

TOOL LIST
Safety Glasses

1. Before beginning installation be sure to wear proper eye protection.
2. Remove Speed Grille sections from their packages. You will have a driver's side and a passenger side and both centers are the same.
3. Install the Speed Grille sections into their proper location of valance from the front side.
4. Attach from backside with 4 attaching clips per section. Two on top and two on the bottom.
5. Make sure the Speed Grille section are positioned properly and the barbs on the clips are locked into holes in the Speed Grille.

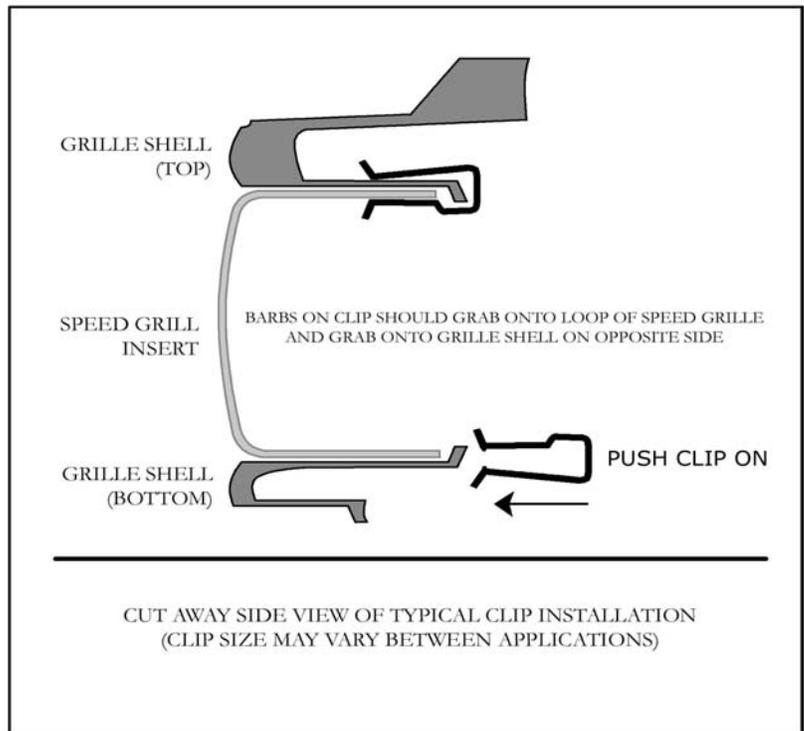

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.