



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-74622

BLACK POWDER COAT BLACK

950-77622 SATIN FINISH

950-78622 CHROME FINISH

2006 - 2007

DODGE CHARGER

LOWER VALANCE

SPEED GRILLE

FOR SSE FRONT FASCIA

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


1	Speed Grille Insert	1	Instruction Sheet	12	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST

NO TOOLS REQUIRED

1. Install the Speed Grille insert into the lower opening of fascia.
2. Clip from the back side by sliding the clip over the Speed Grille and over the edge of opening.
3. Use six clips on the top and six clips on the bottom side.
4. The illustration below shows how to install the installation clips.

TYPICAL CLIPPING INSTALLATION

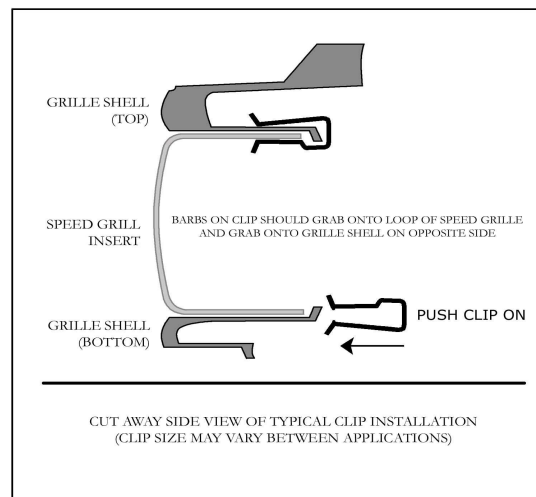

NOTE:

Speed Grilles are also available for the upper openings. Use Street Scene P.N. 950-7X621 Replace the X in the part number with the finish you prefer. 4 = Black Powder Coat 7 = Alum Anodized Satin 8 = Chrome Finish

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

06/28/07 SSE 950-74622 & 950-77622 & 950-78622