



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, CA. 92626
Phone (714) 426-0590 Fax (714) 426-0591

950-74645 BLCK PWDR COAT
950-76645 BLACK CHROME
950-77645 SATIN FINISH
950-78645 CHROME FINISH
950-79645 STAINLESS STEEL
2005-2009
CHRYSLER 300 & 300C
MAIN GRILLE

INSTALLATION INSTRUCTIONS

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	14	Installation Clips # 71098
1	Care For Grilles				

TOOL LIST	
Flat Blade Screwdriver, #2 Square Drive Bit, #3 Square Drive Bit, Ratcheting Bit Driver, Black Spray Paint Masking Tape	

STEP 1: REMOVING GRILLE SHELL FROM VEHICLE.

1. Open hood and remove the two plastic header panels by lifting straight up. Remove the top plastic push fasteners by lifting the center and prying out.
2. Unclip the top and sides of the factory grille by pulling straight out.
3. Remove the large plastic screws that secure the bumper cover to the black bumper Styrofoam using a #3 square drive bit.
4. Remove the lower four factory mounting screws by using a small ratcheting screw driver or a ratching box wrench and a #2 square drive bit. Pull the grille out as far as you can to gain clearance for screw removal. Remove the screws from right to left. The screws will be easier to remove as you go. Save screws for installation.

STEP 2: INSTALLING SPEED GRILLE TO GRILLE SHELL

1. Mask off outside chrome perimeter of grille shell. Paint the inside verticle and horizontal bars with flat spray paint. Make sure grille is clean before painting.
2. Set the Speed Grille insert over the cross bars. Set the top in first and then push the bottom in.
3. Flip grille over make sure grille is setting on a protective covered table or bench.
4. The Speed Grille will be fastened using the 14 clips provided. Refer to illustration for clipping procedure.
5. Refer to photo and install the retaining clips as positioned. Install clips so that they " GRAB " the second loop in Speed Grille to keep the Speed Grille as close to the OEM grille shell as possible. TIP Using a small flat blade screwdriver will aid in this procedure.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.


10/16/15 SSE 950-74645 & 950-76645 & 950-77645 & 950-78645 & 95079645

PHOTO FOR CLIP PLACEMENT



Install the grille shell back into vehicle in the reverse order of removal. DO NOT over tighten the fasteners that go into the Styrofoam.

TYPICAL CLIP INSTALLATION

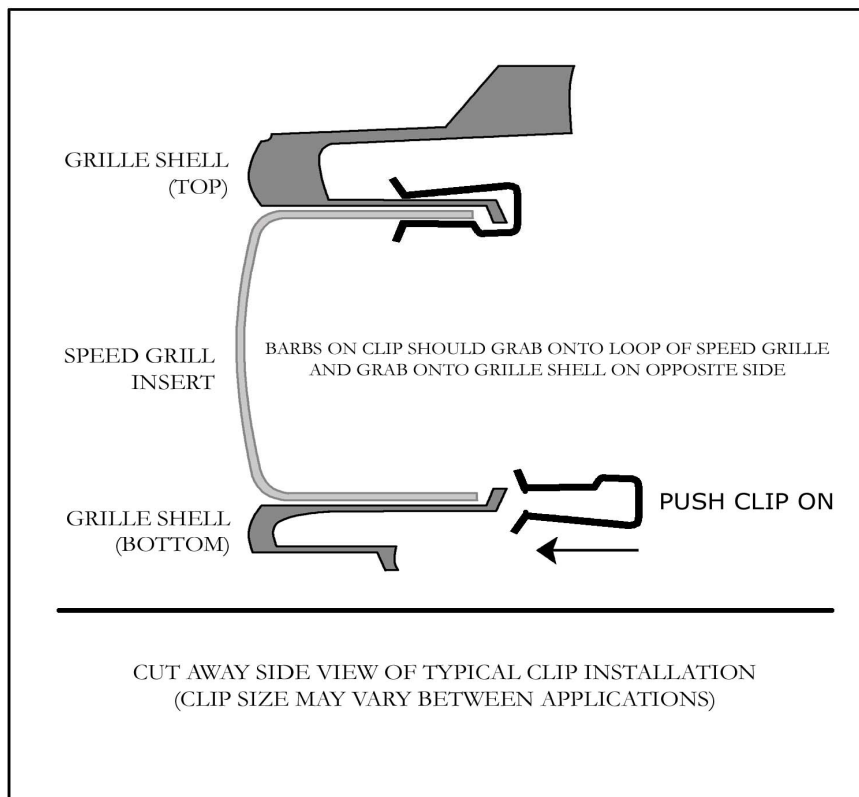

10/16/15 SSE 950-74645 & 950-76645 & 950-77645 & 950-78645 & 95079645