



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77650
1995 - 1998
DODGE NEON
STD MODEL
SPEED GRILLE INSERT


INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	4	No. 10 Washerhead Screws # 66126
1	Got Street Scene Decal	1	Street Scene Emblem	2	10/32 X 1" Screws # 00831
2	Spacer # 005-49019	2	Washer # 005-01021		

TOOL LIST
9/32 Socket, Extension, Ratchet, Phillips Screwdriver, Drill Motor, 1/8" Drill Bit, Hack Saw

1. Open hood.
2. Remove the OEM grille by removing the 9/32 head screws located at each end and screws by the hood latch. Save all screws.
3. Refer to photo and cut the OEM grille as indicated. Save the small sections.
4. Using the 8/32 X 1" machine screws provided install the cut sections with the black spacer under it to the holes where removed.
5. Center Speed Grille in opening. Attach bottom side using two washer head self drilling screws provided.
6. Attach the top at each corner by drilling an 1/8" hole thru the cut sections installed in step 4. Secure with the remaining two screws provided using the flat washer under the screw head.

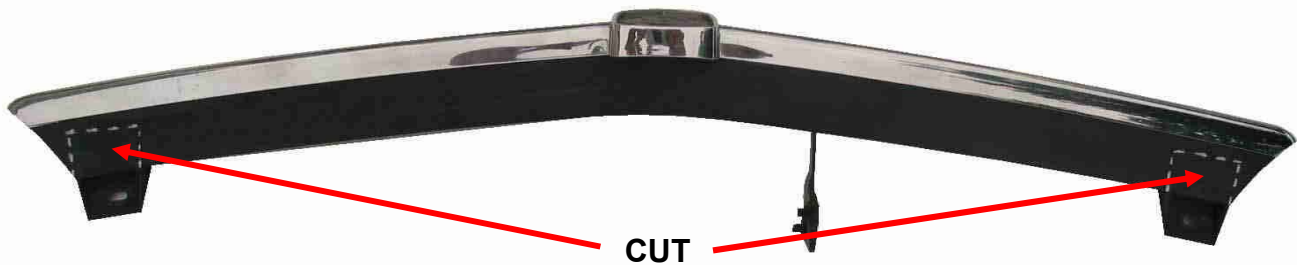

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6/20/03 SSE 950-77650