

## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591 950-77661 2004 VOLVO S60 / V70 SPEED GRILLE INSERT VALANCE GRILLE

## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT!** Read and understand all directions and check the following parts list before starting installation.


NOTE: It will be necessary to remove the front facia to install Speed Grille

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	4	Installation Clips # 71099
1	Care For Grilles	1	Street Scene Emblem	4	Push In Fasteners

TOOL LIST
12 MM Socket, 8 MM Socket, Ratchet, Extension, Drill Motor, 1/4" Drill Bit

- 1. Remove the headlight wipers by fliping up the cap and removing the 8 MM nut securing it.
- 2. Remove the fasteners located in the lower corners of the right and left wheel wells.
- **3.** Open hood. Remove the six fasteners across the top side of facia. To do this push the center in and pry out the fastener. Save all fasteners for re-assemble.
- 4. Remove the black impac strips.
- 5. Remove the two 12 MM head bolts that are now exposed.
- 6. Un-snap facia at the wheel well ends and remove.
- 7. Set on table or bench.
- 8. Remove the rubber strip across top of opening.
- 9. Install the Speed Grille into opening. Fasten the top side using four 71099 clips and the bottom side using the four push in fasteners drill four 1/4" holes thru the loop in Speed Grille and into facia. Insert push in fasteners.
- 10. Install front facia in reverse order of removal.

## TYPICAL CLIP INSTALLATION

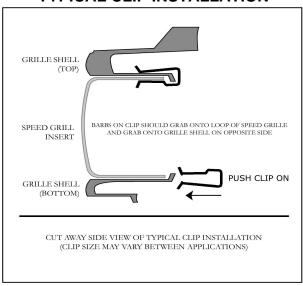

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

05/24/04 SSE 950-77661