



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-77663
 2004
 VOLVO S60R / V70R
 SPEED GRILLE INSERT
 VALANCE GRILLE

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


NOTE: It will be necessary to remove the front facia to install Speed Grille

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	6	Installation Clips # 71099
1	Care For Grilles	1	Street Scene Emblem	6	Installation Clips # 71093

TOOL LIST	
12 MM Socket, 8 MM Socket, Ratchet, Extension, Saw, Silver Paint	

1. Remove the headlight wipers by flipping up the cap and removing the 8 MM nut securing it.
2. Remove the fasteners located in the lower corners of the right and left wheel wells.
3. Open hood. Remove the six fasteners across the top side of facia. To do this push the center in and pry out the fastener. Save all fasteners for re-assemble.
4. Remove the black impac strips.
5. Remove the two 12 MM head bolts that are now exposed.
6. Un-snap facia at the wheel well ends and remove.
7. Set on table or bench.
8. Remove the rubber strip across top of opening.
9. Install the Speed Grille into opening. Fasten the top side using six 71093 clips and the bottom side using six 71099 clips. Refer to illustration for installation procedure.
10. Install front facia in reverse order of removal.

TYPICAL CLIP INSTALLATION

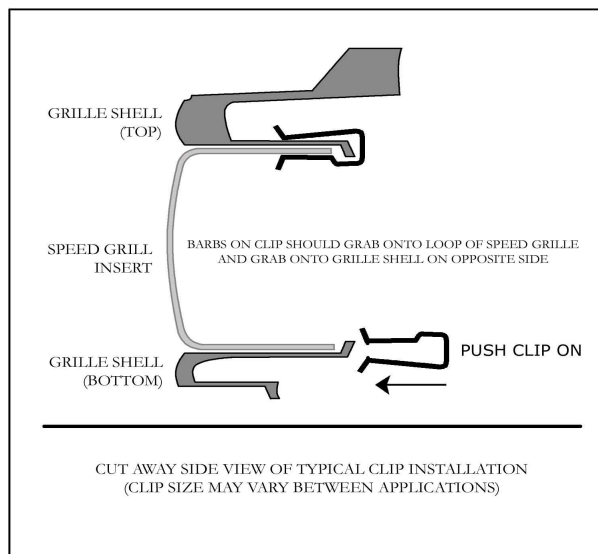

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

12/17/03 SSE 950-77663