



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-77708 SATIN FINISH
&
950-78708 CHROME FINISH
2000 - 2002
FORD F-150 SUPER CREW
OEM VALANCE
GRILLE INSERTS
2 WD ONLY

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Street Scene Emblem	1	Instruction Sheet	16	Installation Clips # 71098
1	Got Street Scene Decal			1	L.H. Speed Grille Section
1	R.H. Speed Grille Section			2	Center Speed Grille Section

TOOL LIST	
No Tools Necessary	

1. Install Speed Grille inserts into the lower valance from the front side. The longer side goes up. **NOTE:** The two center grille are alike.
2. Attach each grille section with four clips (the flat side of clip goes away from grille.)
3. Install the Street Scene Emblem on the grille face. Remove the protective covering.

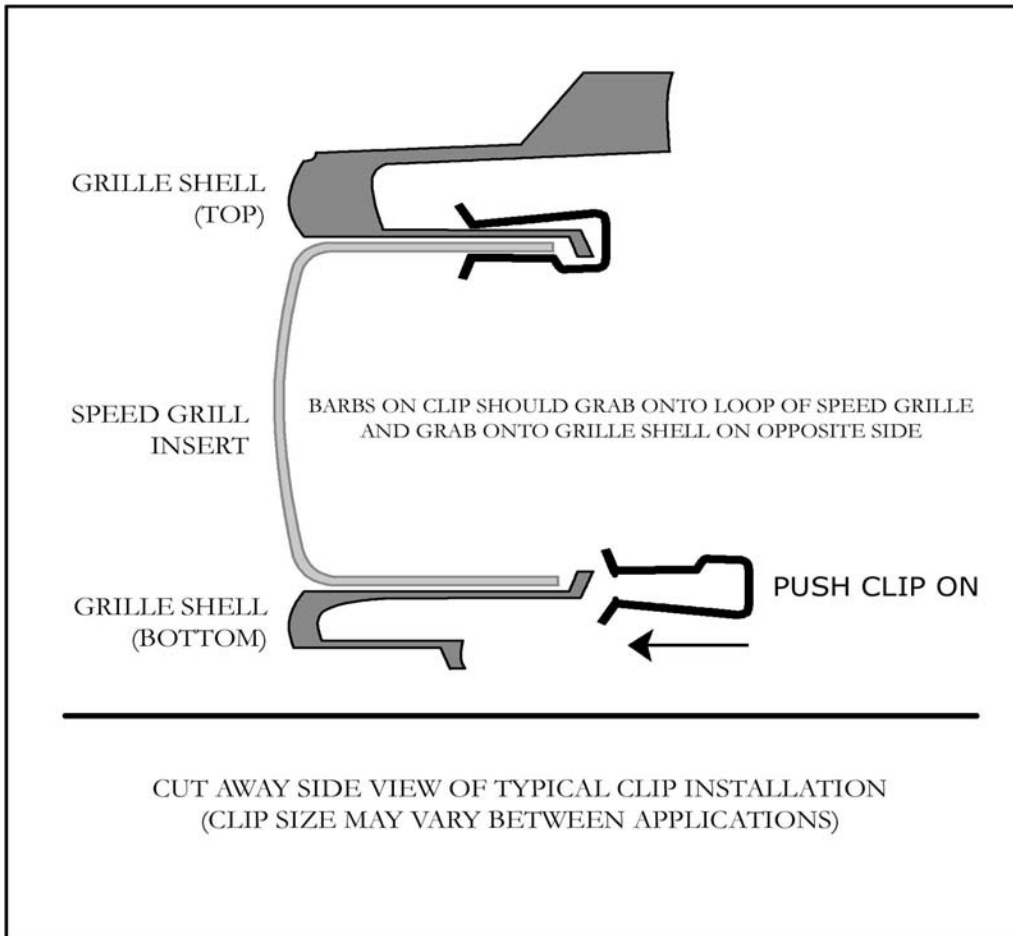

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.