



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77742 SATIN FINISH  
950-78742 CHROME FINISH  
2006 - 2007  
FORD EXPLORER  
LOWER SPEED GRILLE INSERT  
XLT - LIMITED MODELS  
WILL NOT FIT IRONMAN  
&  
EDDIE BAUER MODELS

## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.



PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71099
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST
Flat Blade Screwdriver

1. Raise the front of vehicle.
2. Install the Speed Grille insert into the opening from the front side, making sure the grille lays on the black painted portion.
3. From the back side fasten the Speed Grille to shell using the eight clips provided. Use the drawing and photo for proper install and positioning of clips.

### TYPICAL CLIP INSTALLATION

### Position Of Clips

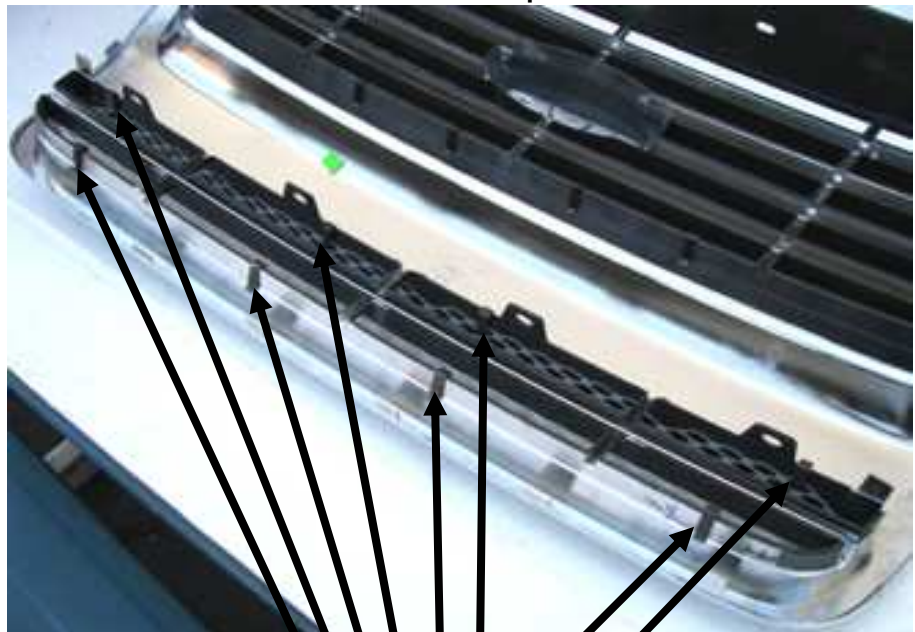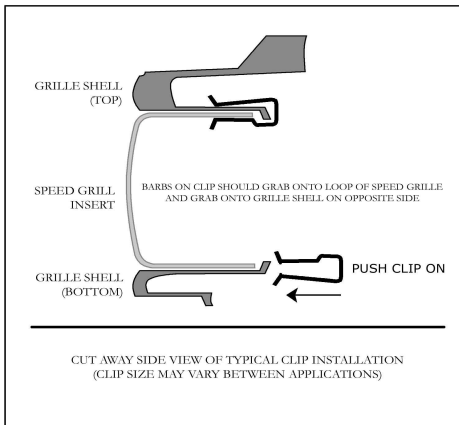

71099 Clips

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

06/10/08 SSE 950-77742 & 950-78742