



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-76753 BLACK CHROME

&

950-77753 SATIN FINISH

&

950-78753 CHROME FINISH

2006

FORD FUSION

V 6 SSE VALANCE

SPEED GRILLE INSERT

### INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

#### PARTS LIST

1	Speed Grille Insert	1	Instruction Sheet	6	1/4" Push In Fasteners
1	Care For Grille	1	Street Scene Emblem	5	Installation Clips # 71098

#### TOOL LIST

7MM Socket, 8MM Socket, 10MM Socket, Ratchet, Phillips Head Screwdriver, Flat Blade Screwdriver, Or Panel Removal Tool, 1/4" Drill Bit, Drill Motor

#### NOTE:

**We Recommend installing the valance grille at the same time when installing the main grille**


1. Remove the front fascia from the vehicle. This can be achieved by raising the front of the car to gain access to the bottom side.
2. Using a 7MM socket and ratchet remove the ten fasteners across the bottom side, fastening the fascia to the air deflector.
3. In side each wheel well there are three ABS fasteners that need to be removed that connect the wheel well housing to the front fascia. Pry the center up on the fastener, and then the body to remove. Do the same on both sides.
4. Gently pull the inner fender back and snap out the parking lamps.
5. Reach in and unplug the signal lamps by releasing the lock tab and then pulling the plug out. Do this on both sides.
6. Open the hood. Remove the two push in fasteners attaching the center of the grille to the core support. Disgard fasteners. Remove the two 8MM head bolts attaching the outer sides of grille to core support.
7. With the help of another person remove the front fascia. The fascia will " Un-snap " from the front fenders.
8. If installing the upper Speed Grille remove the entire black ABS backing with chrome grille from the fascia. To do this, remove the rubber bumper at each grille end with a phillips screwdriver. Un-snap the black ABS backing from the fascia.
9. If you are not installing the upper Speed Grille at this time cut the backing above the lower opening and remove the backing behind the lower opening ONLY.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.


02/14/06 SSE 950-76753 & 950-77753 & 950-78753

10. Install the Speed Grille into the lower opening using the clips provided. Refer to the drawing below and clip the center of Speed Grille to the center tab. Clip the Speed Grille to the other 4 tabs in the same way. Fasten the bottom of Speed Grille to the fascia by drilling a 1/4" hole through the " LOOP " hole in Speed Grille into the fascia. Do this in the center and at each end and centered between. Insert the push in fastener to retain grille. Look at the photo below for reference.

**DRAWING**

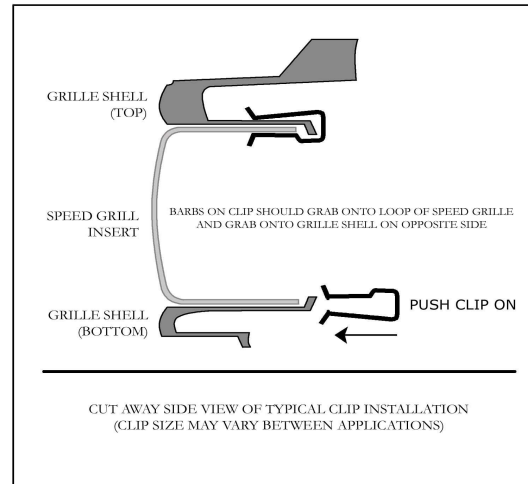

**PHOTO**  
**Installation Clips**

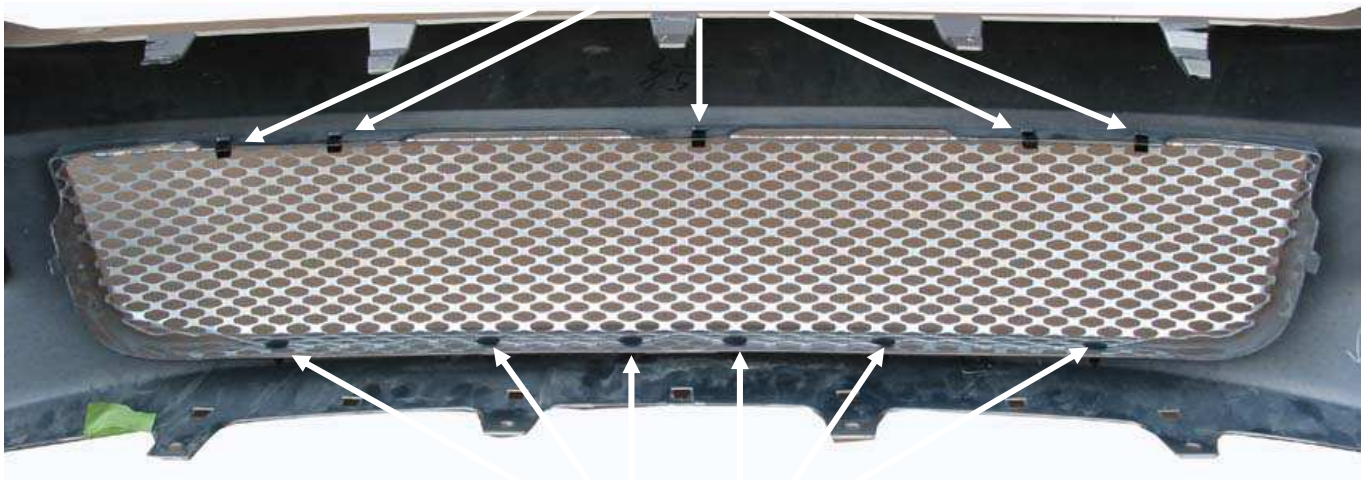

**Push-In Fasteners**

11. If installing the Upper Speed Grille follow the instructions included with the grille at this time.
12. Install the front fascia back on vehicle in the reverse order of removal.