



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


**950-77757 SATIN FINISH
&
950-78757 CHROME FINISH
1999 - 2001
FORD F-250 & F-350
SUPER DUTY
OEM BUMPER GRILLE**

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation. Installation time is approximately 30 minutes.

| PARTS LIST | | | | | |
|------------|------------------------|---|---------------------|---|----------------------------|
| 1 | Speed Grille Section | 1 | Instruction Sheet | 8 | Installation Clips # 71098 |
| 1 | Got Street Scene Decal | 1 | Street Scene Emblem | | |

| TOOL LIST | |
|------------------------|--|
| Flat Blade Screwdriver | |

1. Remove the 4 push-in fasteners holding the air deflector to the lower side of the bumper save the fasteners.
2. Install the Speed Grille into the opening from the front side with the top side facing up.
3. Reach in from behind the bumper and install 4 attaching clips across the top and 4 across the bottom with the flat side away from the Speed grille.
4. Re-attach the air deflector to the bumper.
5. Attach the " Street Scene Emblem " to the grille. Remove the protective cover.

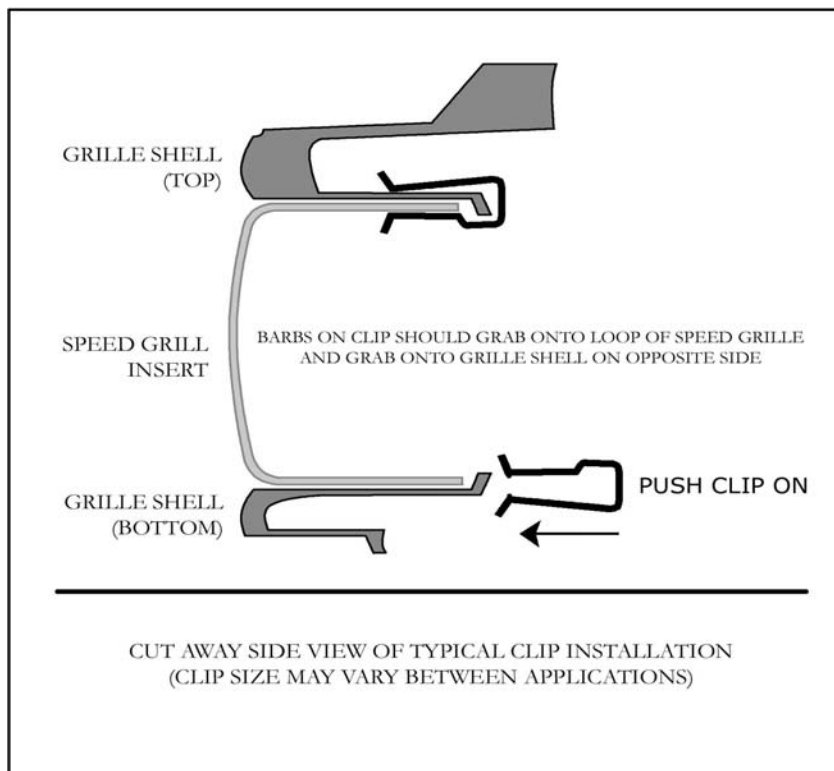

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

9/4/01 SSE 950-77757 & 950-78757