



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76781 BLACK CHROME
950-77781 SATIN FINISH
950-78781 CHROME FINISH
2009
FORD FLEX
LOWER SPEED GRILLE SET

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE

We highly recommend installation the upper Speed Grille insert at the same time as installing the lower Speed Grille inserts.

PARTS LIST


1	Speed Grille Insert Set Upper And Lower	14	Installation Clips # 71099 (1" Long)
4	11" Plastic Ties	1	Installation Sheet
1	Care For Grilles	14	Installation Clips # 71095 Jumbo Clips

TOOL LIST

Phillips Screwdriver, Flst Blade Screwdriver, Door Panel Removal Tool, 5 MM Socket, Ratchet

1. Remove the front fascia by turning the front wheels left to right and removing the fasteners located in the wheel housings, securing the fascia. Just above the license plate bucket are located two plastic retaining fasteners. Remove these and save for reassemble. Raise the front of vehicle to gain access to the under side. Remove the hex headed screws that secure the fascia to the vehicle. Remove the fasteners across the top side of fascia. Gently pull the fascia at each wheel well opening to unsnap the fascia beneath the head lamps. With the aid of another person remove the fascia.
2. Install the lower Speed Grille into the opening from the front side. From the back side " Clip " the Speed Grille to the fascia with the 71099 clips (1" Long). Refer to the illustration below for clip installation.

TYPICAL CLIPPING INSTALLATION

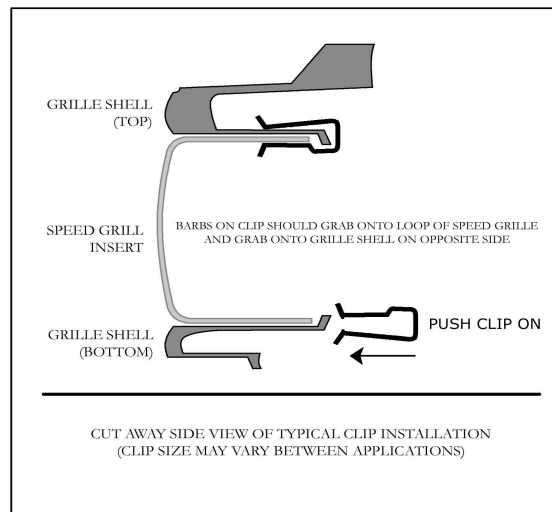

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

3. Install the upper Speed Grille into the opening from the front side. From the back side loop a plastic tie strap through the loop on Speed Grille and attach it to the fascia on each end. Clip the Speed Grille to fascia between ties with the 71095 Jumbo clips.
4. Install the fascia back on vehicle using all fasteners removed during disassemble.

