



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, CA. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77815 SATIN
&
950-78815 CHROME
FORD RANGER
4 WHEEL DRIVE ONLY
1999 - 2000

INSTALLATION INSTRUCTIONS


(note: For 2WD Use Part #
950-77810)

VERY IMPORTANT ! Read and understand all directions, then check the following parts list before starting installation.

PARTS LIST					
1	Upper Grille Center	1	Instruction Sheet	24	Med. Attaching Clips # 71098
1	Lower Grille Center	1	Street Scene Decal	1	Got Street Scene Decal
1	RH Upper Section	1	LH Upper Section		
1	RH Lower Section	1	LH Lower Section		

TOOL LIST	
1/4" Socket & Ratchet	

1. Open hood.
2. Remove the four 1/4" head screws securing the upper portion of the Grille Shell. Grasp the Grille Shell at the bottom edge and pull gently to release clips from support panel. **Note:** If metal clips are not retained on the Grille Shell, remove them from the grille support panel and install them on the Grille Shell before re-installing.
3. Set Grille Shell on a clean covered table or work bench. Remove Speed Grille inserts from their packages. Install each Speed Grille insert into it's opening and clip to grille using two clips on the top side and two clips on the bottom side. Install one Speed Grille insert at a time. Install all clips with the flat side away from the grille insert. **NOTE:** Barbs on the clips should grab the inside of the hole on the Speed Grille insert.
4. Install Grille Shell back into vehicle by aligning the lower clips and gently tapping in. Install the four screws across the top.

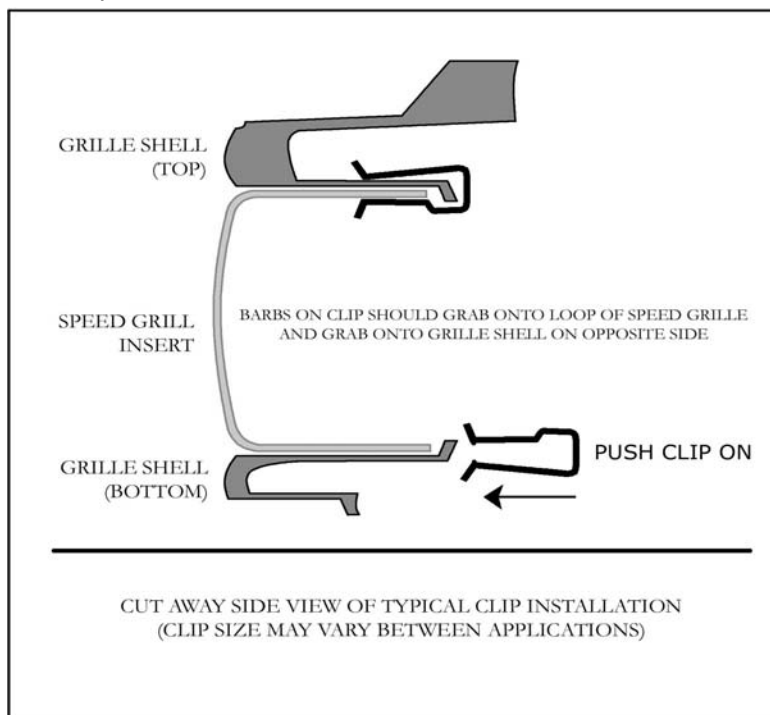

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6/28/01 SSE 950-77815 & 950-78815