



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77826 SATIN FINISH
&
950-78826 CHROME FINISH
2005
FORD F-350 / EXCURSION
STREET SCENE BUMPER
COVER SPEED GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


SPEED GRILLE INSERTS ONLY FIT 950-70829 STREET SCENE BUMPER COVER

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71099
		1	Street Scene Emblem	1	Care For Grille Sheet

TOOL LIST

1. Speed Grille insert can be installed before or after bumper cover is installed.
2. Install the Speed Grille insert into the opening. Grille insert is marked top. Fasten from the back side using four attaching clips across the top and four across the bottom. Refer to illustration for clipping procedure.

TYPICAL CLIP INSTALLATION

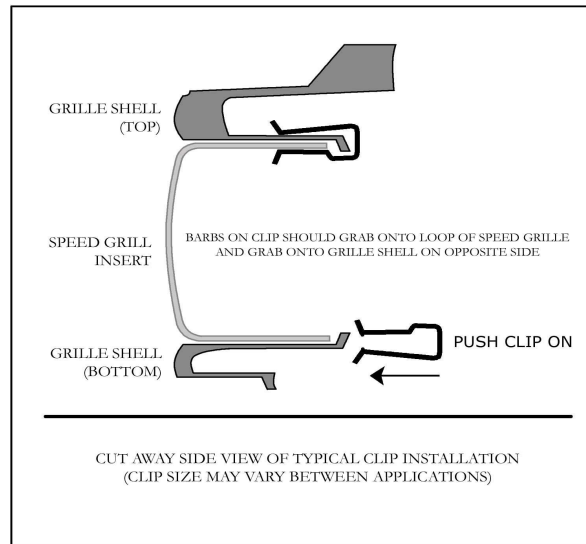

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.