



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77831
&
950-78831
**FORD EXPEDITION
S/S VALANCE
GRILLE INSERT**


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE: It is highly recommend to install the Speed Grille insert at the same time when installing the valance.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
1	Got Street Scene Decal	1	Street Scene Emblem	1	Care For Grilles Instruction

TOOL LIST	
No Tools Required	

1. If you are installing the 950-70831 valance install Speed Grille before installing the valance / grille combo back on truck.
2. Insert the Speed Grille into the opening from the front side. From the back side use four of the attaching clips on the top side and four on the bottom side. The " humped " side of clip goes on the Speed Grille side.
3. Peel the backing off the " Street Scene " emblem and attach to the Speed Grille face. Remove the protective cover on it's face.

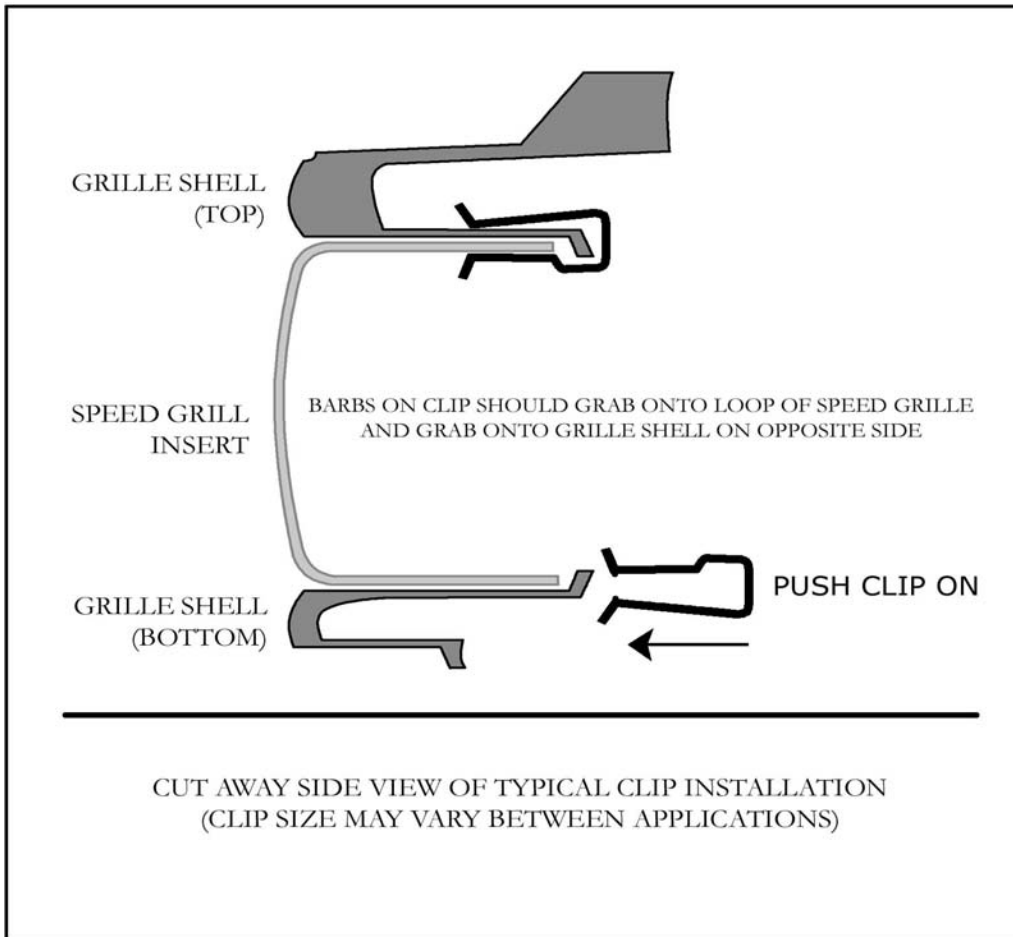

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

2/24/03 SSE 950-77831 & 950-78831