



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76842 BLACK CHROME

950-77842 SATIN FINISH

950-78842 CHROME FINISH

2008

TOYOTA TUNDRA

BUMPER SPEED GRILLE

INSERTS 3 PC SET

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


1	Speed Grille Inserts 3 PC Set	12	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem
		1	Insruction Sheet

TOOL LIST

NO TOOLS REQUIRED

1. Open hood.
2. Install the center Speed Grille (Longer Grille) into the center opening of the bumper with the short return side facing up.
Clip the Speed Grille to the plastic edge. Use the drawing below for a guide. Use a clip on each top corner and two on the bottom side.

TYPICAL CLIP INSTALLATION

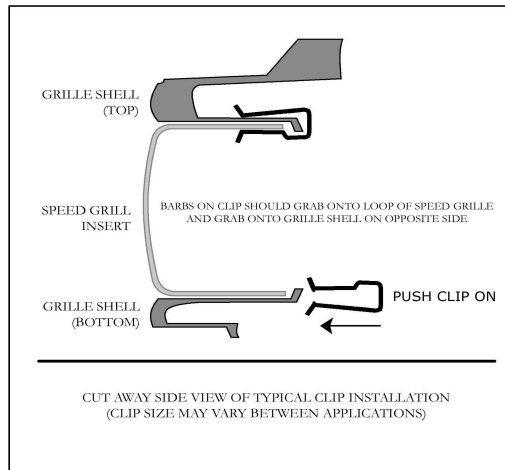

3. Install the right and left side Speed Grilles in the same manner, keeping the short side up. Both are identical. Clip to the bumper in the same manner as the center.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

03/19/08 SSE 950-76842 & 950-77842 & 950-78842