



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77855

1995 - 1996

TOYOTA

TACOMA 2 WD

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST

1	Upper Grille Section	1	Instruction Sheet	24	Attaching Clips # 71098
1	Lower Grille Section	1	Street Scene Emblem	1	Got Street Scene Decal

TOOL LIST

Miss. Hand Tools, Cutting tools, 80 Grit Sandpaper, 220 sandpaper, Black Spray Paint

1. Remove OEM grille shell from truck.
2. Cut out the horizontal and vertical bars in the grille shell. **DO NOT REMOVE MOUNTING TABS.**
3. Sand the cuts with 80 grit sandpaper and finish up with 220 grit sandpaper. Mask off and paint the area with black spray paint. **NOTE:** If color matching grille shell to truck it is not necessary to paint black.
4. Install Speed Grille inserts into opening.
5. Clip from back side using 12 clips per grille. Use 6 across the top and 6 across the bottom.
6. Install grille shell into truck.
7. Pull Plastic cover off on Street Scene Emblem. And attach Emblem on grille.

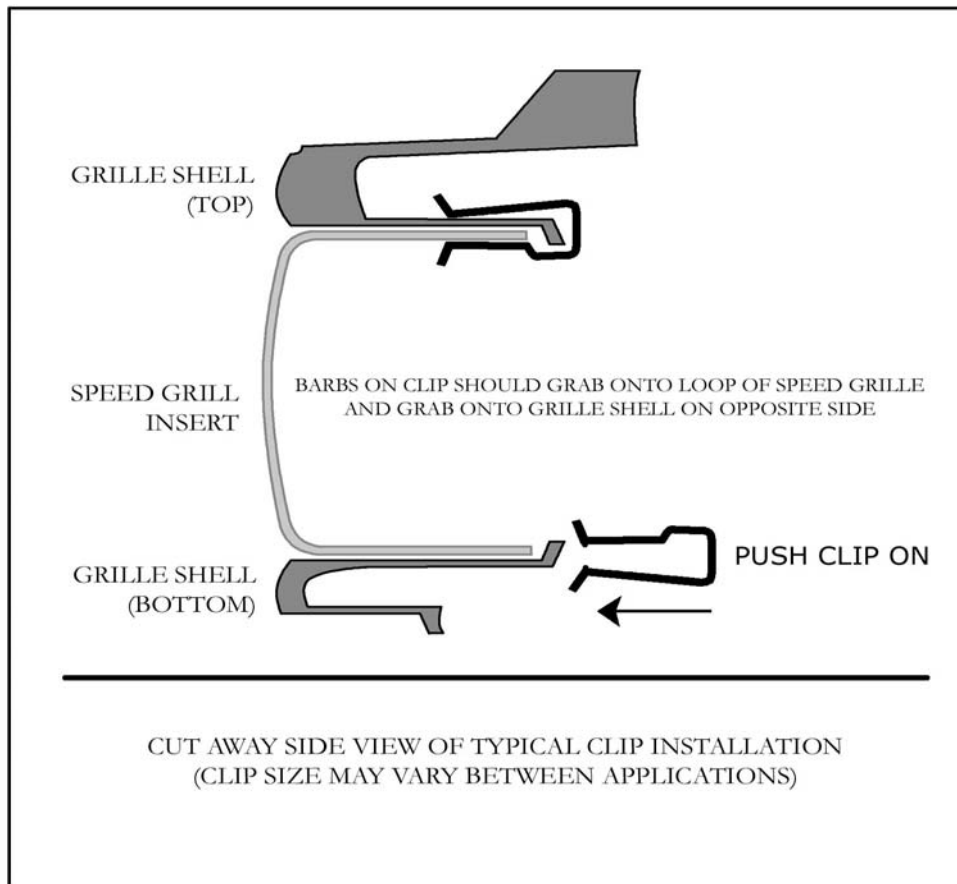

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

3/22/01 SSE 950-77855