

STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591 950-77858 950-78858 2007 TOYOTA FJ CRUISER MAIN GRILLE CHROME

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST						
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71092	
1	Care For Grilles	1	Street Scene Emblem			

	TOOL LIST	
10 MM Socket, Ratchet	10 MM Socket, Ratchet	

- 1. Open hood.
- 2. Remove the two 10 MM head bolts securing the grille shell above the headlights.
- 3. Pry out the two push in fasteners located on the grille shell top.
- 4. Pull the bottom side of grille to " un-snap " the snap-in fasteners. Remove grille shell.
- **5.** Install the Speed Grille over the diamond grids on the grille shell.
- **6.** Flip over and install the eight installation clips with the "Humped " side facing the Speed Grille. Install clips as positioned in PHOTO BELOW.





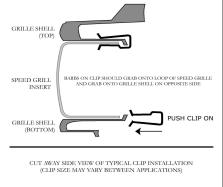

THE SPEED GRILLE[™] may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.