



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77859

950-78859

2007

TOYOTA FJ CRUISER
OEM VALANCE GRILLE
CHROME

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71099
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST

NO TOOLS NEEDED

1. Set the Speed Grille insert over the opening in the front bumper.
2. From the back side secure the Speed Grille to the bumper cover using the eight clips provided. Use four on the top and four on the bottom sides. Refer to drawing below for clip installation.

TYPICAL CLIPPING INSTALLATION

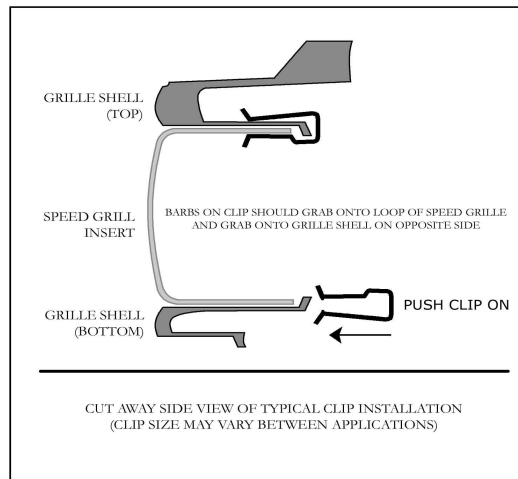

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

09/28/07 SSE 950-77859 & 950-78859