



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77860
1995 - 1996
TOYOTA TACOMA 4 WD
GRILLE INSERT

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
		1	Street Scene Emblem		

TOOL LIST	
Phillips Screwdriver, Long Blade Flat Screwdriver	


1. Open hood.
2. Remove the phillips head screws located at each corner of grille. Pull forward on corner lamp to unhook from body. Unplug lamp and remove.
3. Remove the body colored sections below the headlamps by pulling outward gently. A flat blade screwdriver will aid in this operation. Be careful not to scratch the paint or grille.
4. Refer to illustration and depress the small tab on fasteners and pull gently to release grille from core support. Six are located on top and five on the bottom side.

ILLUSTRATION

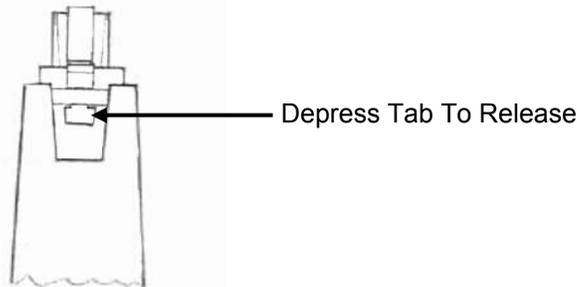

5. Set the grille on a covered bench or table. Remove the Toyota logo by depressing the tab on the top center of logo on backside.
6. Install the Speed Grille into the grille shell. Fasten the top side using four clips and fasten the bottom side using four clips. Refer to illustration for proper procedure.

TYPICAL CLIP INSTALLATION

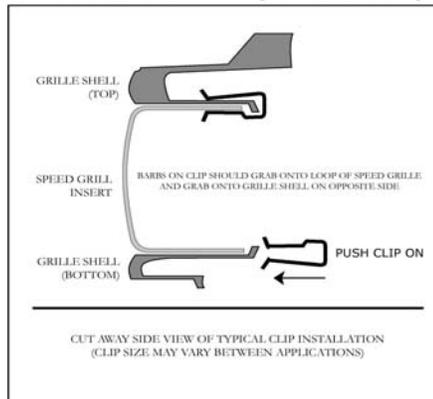

7. Install grille shell back into vehicle by gently pushing at fastening points.
8. Plug in side marker lamps and install phillips head screw removed in step two.
9. Snap in body sections below head lamps.
10. Check all lamps for proper operation before driving vehicle.
11. If you desire to retain the Toyota logo, cut off all tabs on backside. Use two side tape to fasten.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.