



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77868

2005

TOYOTA TACOMA
SPEED GRILLE INSERT

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	16	Installation Clips # 71099
1	Care For Grilles	1	Street Scene Emblem	16"	2" Wide Two Sided Tape

TOOL LIST	
Flat Blade Screwdriver,	


1. Remove the OEM grille shell by first removing the four fasteners across the top and then by pulling up to release the two lower fasteners at each corner.
2. Remove the " TOYOTA " Logo by depressing inward the three mounting tabs on the back side of grille.
3. Insert the Speed Grille insert into the OEM grille shell. Look at the photo below and clip the Speed Grille to the grille shell.

PHOTO



4. Push the Speed Grille in deep enough so that the clips grab the Speed Grille firmly.
5. The clips are ribbed on one side. See the illustration at right for the proper way to install clips.

TYPICAL CLIP INSTALLATION

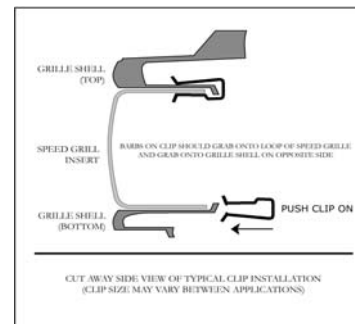

6. Cut off the six tabs on the back side of Toyota Logo apply the two sided tape on the back side. With a razor knife or exacto knife trim off all the excess tape. Remove the blue backing. Apply the Logo at center of grille at the same location the Logo was located on the grille shell.
7. Install the grille shell back into vehicle. Make sure you align the center pin with the locating hole. Fasten with the fasteners removed in step. One.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

07/29/05 SSE 950-77868