



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77870

1997 - 2000

TOYOTA TACOMA

BUMPER GRILLE INSERT

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	12	Installation Clips # 71099
		1	Street Scene Emblem	1	Care For Grilles

TOOL LIST	
NONE REQUIRED	

1. Install Speed Grille insert into the opening in front bumper.
2. From the back side fasten the Speed Grille using six attaching clips across the top and six across the bottom. Refer to illustration for proper procedure.

TYPICAL CLIP INSTALLATION

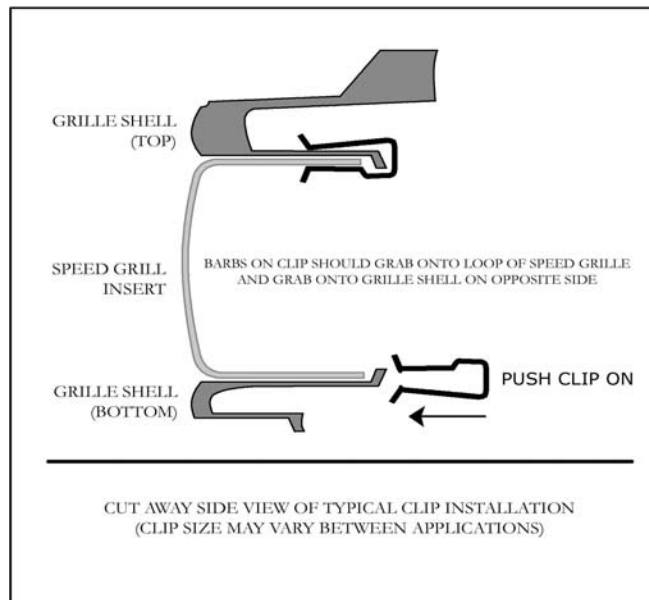

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

12/15/03 SSE 950-77870