



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77890

2000 - 2002

TOYOTA TUNDRA

SPEED GRILLE INSERT

MAIN GRILLE


INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Section	1	Instruction Sheet	6	Installation Clips # 71094
1	Got Street Scene Decal	1	Street Scene Emblem	4	Installation Clips # 71098
		1	Care For Grille Sheet	2	Installation Clips # 71099

TOOL LIST	
Screwdriver, 8 MM Socket, Ratchet, Masking Tape, Black Spray Paint	

1. Remove the OEM Grille Shell by removing the six fasteners securing it to the hood and removing the two fasteners attaching the hood release to the grille shell.
2. Remove the Toyota Emblem on the grille, Mask off the surrounding area of the center chrome bar. Paint the chrome bar black.
3. Set the Speed Grille insert into the grille shell by inserting the top first and then pushing the bottom in work Speed Grille into opening.
4. Attach with the clips provided. Refer to the picture to the location of the attaching clips. Install the lower clips first and the top clips next. When installing the lower clips the long end goes on the grille side the shorter side of clip will go on the steel edge. To aid in the installation of the clips a small screwdriver will help.

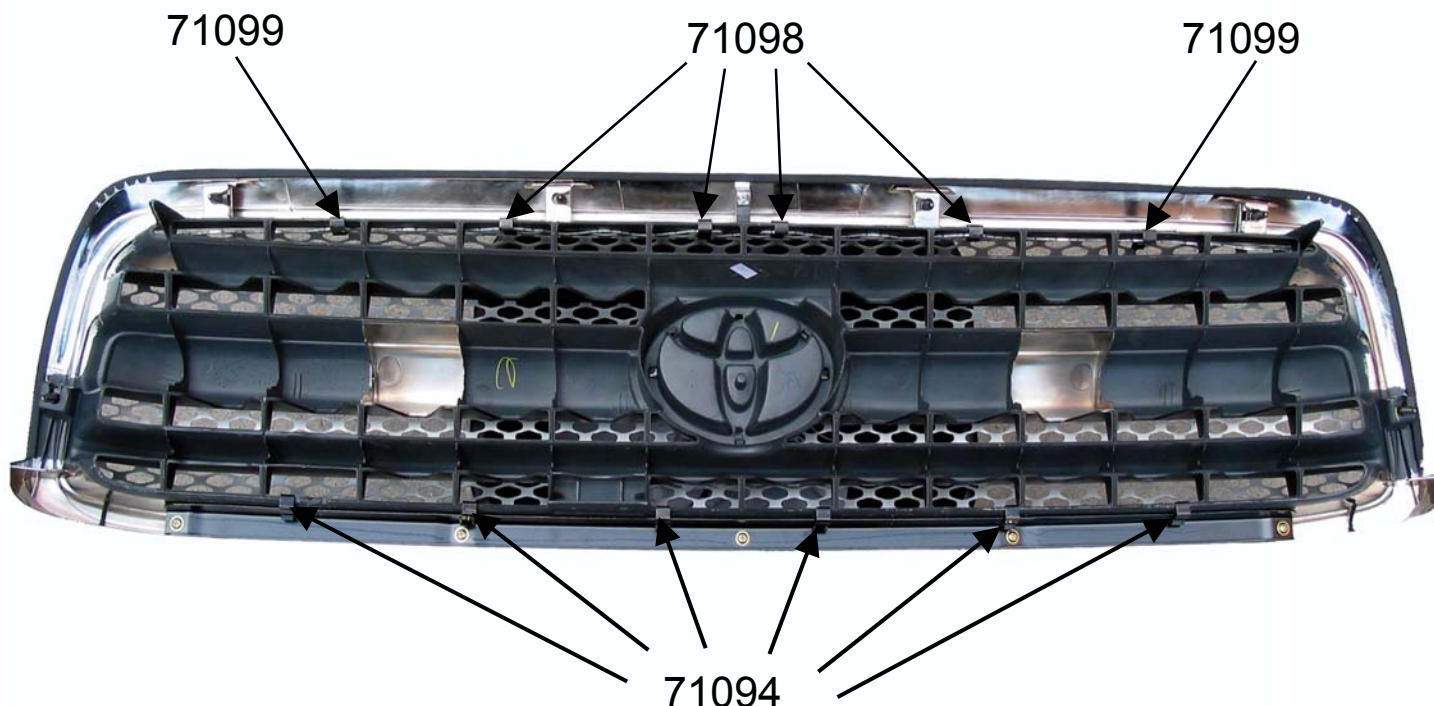

5. Install the grille shell back into the vehicle.
6. Install the Street Scene Emblem on the grille face. Remove the protective cover.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

