



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77935

1990 - 1991

HONDA ACCORD

OEM VALANCE INSERT

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST

1	Speed Grille Insert	1	Instruction Sheet	6	Installation Clips # 71098 (3/4" Long)
1	Care For Grilles	1	Street Scene Emblem	2	Installation Clips # 71097 (1/2" Long)

TOOL LIST

1. Raise front of vehicle to gain access to the back side of the opening in the front bumper.
2. Install the Speed Grille into the opening from the front side. Refer to illustration and attach Speed Grille to bumper cover using the clips provided. Use four 71098 clips on the bottom side and one 71097 clips at each end on the top side. Center the remaining 71098 clips between the outside clips.

TYPICAL CLIP INSTALLATION

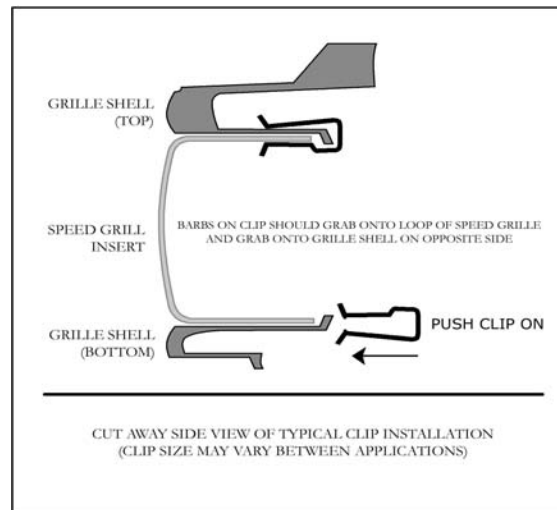

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

12 / 10 / 03 SSE 950-77935