



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77943 SATIN FINISH
950-78943 CHROME FINISH
SPEED GRILLE
HONDA RIDGELINE

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Attaching Clips # 71096
1	Instruction Sheet	1	Care For Grilles Sheet	4	Attaching Clips # 71098

TOOL LIST
Phillips Head Screw Driver, Flat Head Screw Driver, 10MM Socket, Ratchet, Extension, Masking Tape, Black Spray Paint

Remove front fascia, this can be done in six easy steps.

1. Remove the six 10MM head bolts on the under side of vehicle. **NOTE:** For reassembly, that the two center bolts are of a shoulder design and are shorter than the outward bolts.
2. Remove the three phillip head screws in each wheel well housing. Turn the front wheels to access.
3. Remove the hex / phillip head bolt located at the corner of each wheel well, were the fascia meets the front fender.
4. Remove the air intake by removing the three fastners securing it to the core support. Pry the center pin up and then the outside body. See photo below.
5. Remove the ABS filler panel between the fascia and core support, by removing the push in fastners as in step four. See photo below.

PHOTO



6. With the aid of another person remove the front fascia. The fascia will unsnap from the front fender. Pull the fascia out and reach down an unplug the light harness from the lights. You will also need to unsnap the wire harness from the metal light bracket. See photo below.

PHOTO




THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

Installing Speed Grille

1. Set the fascia on a protected covered table or bench. Remove the six phillips head screws that secure the grille to the fascia. Unsnap the grille and remove.
2. Mask off the fascia and paint the center vertical bar in the grille area black.
3. Install the speed grille into the opening. Make sure that the grille slides into the small lip in the opening. Look at the photo below and install the attaching clips. The 71098 clips are the narrow body clips and 71096 clips are the wide body clips. Clip speed grille so that it is secure in fascia. The "hump" side of the clips goes on the grille side of attachment.

PHOTO

71098 CLIPS

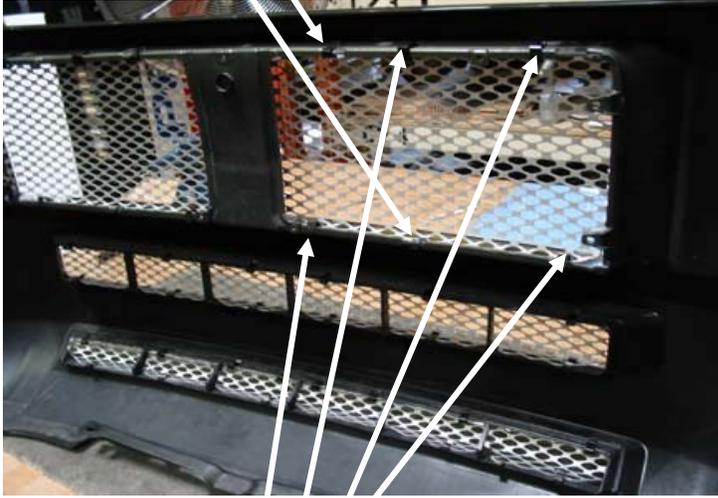

PHOTO



71096 CLIPS

Install fascia back in to vehicle. Make sure to plug in lamps while installing.

PHOTO

