



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77100 SATIN FINISH  
&  
950-78100 CHROME FINISH  
SPEED GRILLE  
88-93 CHEVY C/K TRUCK  
MAIN GILLE

## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation. Installation time is approximately 2hrs.

### PARTS LIST


2	Speed Grille Sections	1	Instruction Sheet	24	Attaching Clips # 71098
1	Got Street Scene Decal	1	Street Scene Emblem		

**NOTE:** No Drilling is required, Cutting out the stock " egg crate " is required ( unless previously cut out for other custom grille ).

### TOOL LIST

Safety glasses, sturdy gloves, # 20 Torx screwdriver, 7 MM socket, 6" extension, ratchet, masking tape, cutting disk or hacksaw ( to cut plastic ), grinder, exacto type knife, & 80 & 150 grit sandpaper. Satin or semi-flat black paint. Body filler & matching body color paint is optional - see step 4.

- 1 . Before beginning installation be sure to wear proper eye protection & gloves when using power tools.
- 2 . Remove the grille shell from the vehicle, Open the hood and remove the four screws across the top, one at the bottom center, one at the top center above the " bowtie " accessed from the front of the grille, and one behind each parking light lens. Save the screws for reattachment.
- 3 . Cover the top, center and lower horizontal bars with masking tape to protect the finish. Cut out the " egg crate " sections as close as possible without damaging the horizontal bars or the vertical sides just inboard of the headlights & parking lights. The " egg crate " sections can be cut with a rotary cutting disc, a saber saw, or hacksaw. If using a rotary disc, you will probably have to make the first cut from the front, then turn the grille over to complete the cut from the back. Always protect your hands with gloves when using rotary cutting tools.
- 4 . Carefully grind any protruding edges remaining from the "egg crate" cuts - don't grind into the horizontal bars and sides of the grill shell. Sand the cut edges flush with first with 80 grit sandpaper, then finish sanding with 150 grit. If you're going for a show finish, you can fill the notches left in the grills shell with body filler. If the notches are filled, this also allows you to set your Speed Grille in a little deeper into the shell if desired. Mask off the chrome part of the grille shell (unless you want to color match the entire shell), then paint the grille shell edges satin or semi-flat black or black or a matching body color if you've filled the notches.
- 5 . The upper and lower Speed Grille sections are labeled. You must put them in properly for the attaching clips to reach the grille and the barbs grab inside the holes. Install each Speed Grille section in the opening, then attach with 6 Speed Grille Clips across the top And 6 Clips on the bottom of each section. Install clips on each side of the bow tie, clips on each end, then clips centered between.
- 6 . Make sure the Speed Grille sections are properly aligned and securely fastened, then reinstall the grille shell on the vehicle with the original fasteners. The one fastener just above the bowtie will not be reused.

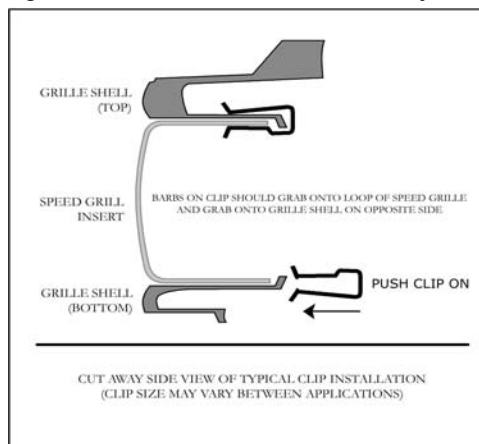

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6/11/01 SSE 950-77100 & 950-78100