

STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-77131 SATIN FINISH & 950-78131 CHROME FINISH 2002 - 2003 CHEVY TRAILBLAZER OEM VALANCE

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST						
1	Center Grille Insert	1	Instruction Sheet	12	Installation Clips # 71098	
1	RH Grille Insert	1	Street Scene Emblem	1	Got Street Scene Decal	
1	LH Grille Insert			1	Care For Grilles Sheet	

TOOL LIST	
NO TOOLS REQUIRED	

- 1. Install Speed Grille inserts in openings as marked.
- 2. Clip from the back side using two clips on the top and bottom of each Speed Grille insert.
- 3. Install the Speed Grille Emblem on grille face. Remove the protective covering.

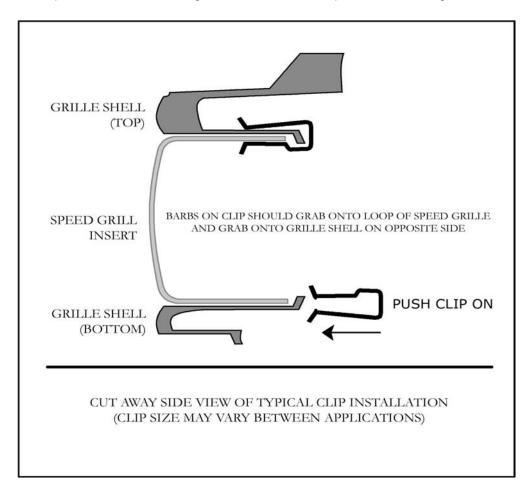

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.