



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77138 SATIN FINISH

&

950-78138 CHROME FINISH

1999 - 2002

CHEVY SLIVERADO

2000 - 2006

CHEV SUBURBAN / TAHOE

SPEED GRILLE INSERT

NOTE: This Speed Grille insert fits Street Scene Valance Part # 950-70138 ONLY

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


1	Speed Grille Insert	1	Instruction Sheet	6	Installation Clips # 71098
		1	Street Scene Emblem	6	Installation Clips # 71099
				1	Care For Grilles Sheet

TOOL LIST

No Tools Required

1. Install the Speed Grille insert into the opening in valance.
2. From the backside attach using the clips provided. Use six of the shorter clips across the top and six of longer clips across the bottom.
3. Install the Speed Grille Emblem onto the Speed Grille face. Remove the protective cover.

TYPICAL CLIP INSTALLATION

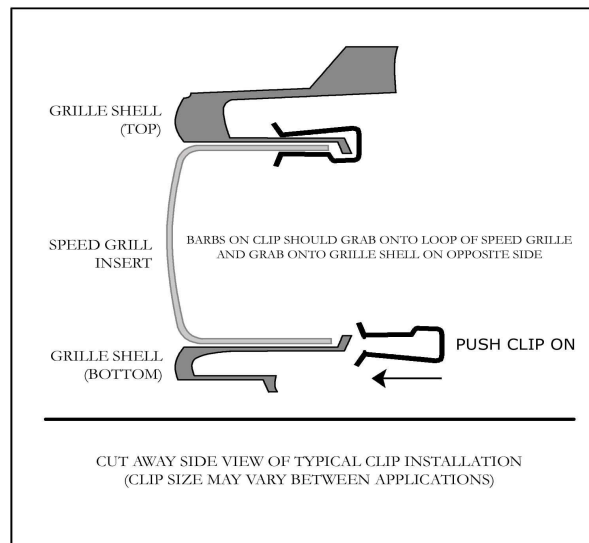

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6/5/02 SSE 950-77138 & 950-78138