



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77152 SATIN FINISH
&
950-78152 CHROME FINISH
2002 - 2005
CHEVY TRAILBLAZER
S/S VALANCE
SPEED GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE: This Speed Grille fits Street Scene valance Part Number 950-70152 ONLY
Use part number 950-77131 for factory bumper cover / valance.

PARTS LIST					
1	Upper Grille Section	1	Instruction Sheet	12	Installation Clips # 71098
1	Lower Grille Section	1	Street Scene Emblem	6	Installation Clips # 71097
				6	Washer Head Self Drilling Screws

TOOL LIST	
1/2" Drill Bit, Drill Motor, Phillips Head Screwdriver	


SPECIAL NOTE:

we highly recommend installing the Speed Grille inserts into Valance before installing Valance on vehicle.

1. Set lower Speed Grille insert into lower opening of valance. Take note of where grille contacts valance. It will be necessary to drill a 1/2" hole as close to the edge as possible at six points across the top and six points across the bottom to install the installation clips.

REFER TO ILLUSTRATION

2. Install the top Speed Grille into the opening. Attach the bottom side using the six short clips. Attach the top side by installing a screw through the grille opening and into valance. Use six screws on this operation.
3. Install the Speed Grille Emblem on grille face. Remove the protective cover.

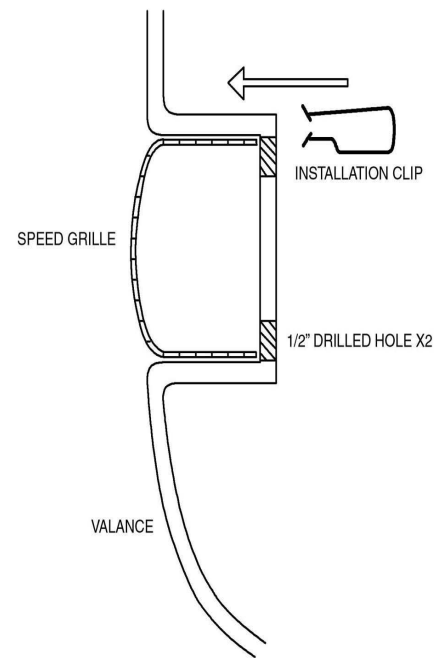

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.