



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-76168 BLACK CHROME
 950-77168 SATIN FINISH
 950-78168 CHROME FINISH
 2007
 CHEVY TAHOE / SUBURBAN
 AVALANCHE
 GENERATION 2
 BUMPER COVER
 SPEED GRILLE INSERTS

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
		1	Street Scene Emblem	1	Care For Grilles

TOOL LIST
NONE REQUIRED

1. The Speed Grille insert may be installed in bumper cover prior to installation of cover.
2. Install Speed Grille into opening from the front side of bumper cover.
3. Attach to bumper cover using the eight installation clips provided. Use four clips across the top and four along the bottom. " Clip " as shown below.

TYPICAL CLIPPING INSTALLATION

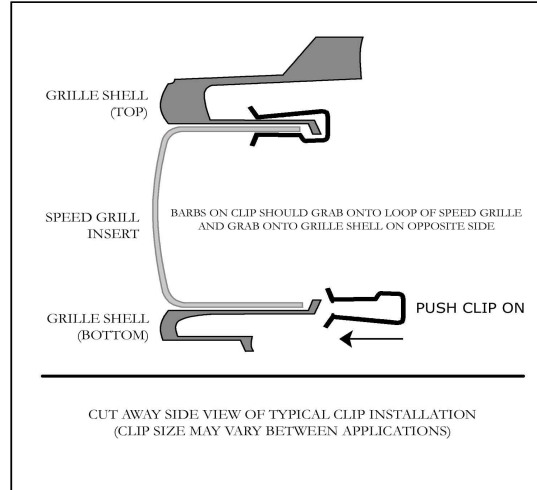

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

03/02/07 SSE 950-76168 & 950-77168 & 950-78168