



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

**950-77243 SATIN FINISH
&
950-78243 CHROME FINISH
2004
CHEVY COLORADO
GENERATION 1
BUMPER COVER
SPEED GRILLE INSERTS**

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE:

This Speed Grille Set Fits P.N. 950-70213 ONLY

PARTS LIST					
1	Care For Grilles	1	Instruction Sheet	1	Center Speed Grille Insert
		1	Street Scene Emblem	1	RH Speed Grille Insert
				1	LH Speed Grille Insert
4	Installation Clips # 71099 1" Long			12	Installation Clips # 71098 3/4" Long


TOOL LIST
None

NOTE:

We recommend installing Speed Grille inserts prior to installing bumper cover.

1. Insert the center Speed Grille into opening. Clip from back side using four 71098 clips across the top and four 71099 clips across the bottom. Refer to illustration for clipping procedure.
2. Install the side grilles into there openings. Each grille is marked for it's location. Gently push grilles in so that the back side is flush with the back side of bumper cover. " Clip " using two clips on the top and and bottom side.

TYPICAL CLIP INSTALLATION

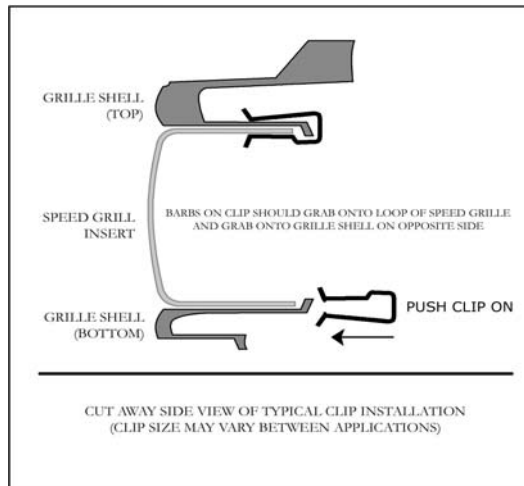

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.