



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76727 BLACK CHROME
950-77727 SATIN FINISH
950-78727 CHROME FINISH
950-79727 STAINLESS STEEL
SPEED GRILLE
2006
FORD F-150
BUMPER SPEED GRILLE
INSERT


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
		1	Street Scene Emblem	1	Care For Grilles
2	1 1/4" X 2' 4" Clear Film Protector Cover				

TOOL LIST	

1. Open hood.
2. Thoroughly clean the inside and outside of the lower opening (valance insert area) of the factory bumper. It is crucial to clean both the top and bottom of the opening, both inside and out.
3. Once bumper opening is clean place 3M vinyl tape strips on the top and bottom of openings. Half the vinyl tape should be on the chrome and the other half should fold over and attach to the back side of the opening.
4. The tape is being installed to give the metal installation clips an area to dig into, without slipping on the Chrome portion of the bumper.
5. Install the Speed Grille insert into the opening in the front bumper. Reach in from behind and clip the Speed Grille to the bumper using the clips provided. Refer to the illustration for clipping procedure. Use four clips on the top side of Speed Grille and four clips on the bottom side.

ILLUSTRATION

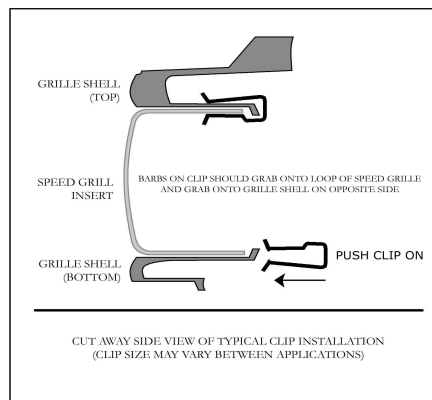

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

07/11/06 SSE 950-76727 & 950-77727 & 950-78727 & 950-79727