



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, CA. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77735 SATIN FINISH
&
950-78735 CHROME FINISH
SPEED GRILLE
1995 - 2000
FORD EXPLORER

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


Note: No Drilling Is Required

PARTS LIST					
1	Upper Grille Section	1	Instruction Sheet	24	Short Attaching Clips #71098
1	Lower Grille Section	1	Street Scene Decal	12	Long Attaching Clips #71099

TOOL LIST	
Safety Glasses, Phillips Screwdriver	

1. Open hood.
2. Remove the right hand & left hand corner lamps at each fender.
3. Remove the four screws securing the grille across the top and the two screws at the right hand and left hand corners.
4. Gently pull the bottom of the grille to release the attaching clips at the right and left of the center and at each end to the outside of the head lamps.
5. Set the grille shell on a protective covered bench or table.
6. Install the upper Speed Grille into the opening gently working it's way in. Attach from the rear using six of the shorter clips across the bottom. Attach the top side of the Speed Grille section with a short clip at each end and with four of the longer clips in the center two cavities. Install clips with the flat side facing away from the Speed Grille.
7. Install the lower Speed Grille into the opening. Attach in the same manner using six of the longer clips across the top and six of the shorter clips across the bottom.
8. Re-install Grille Shell into vehical. Check lights for proper operation.

TYPICAL CLIP INSTALLATION

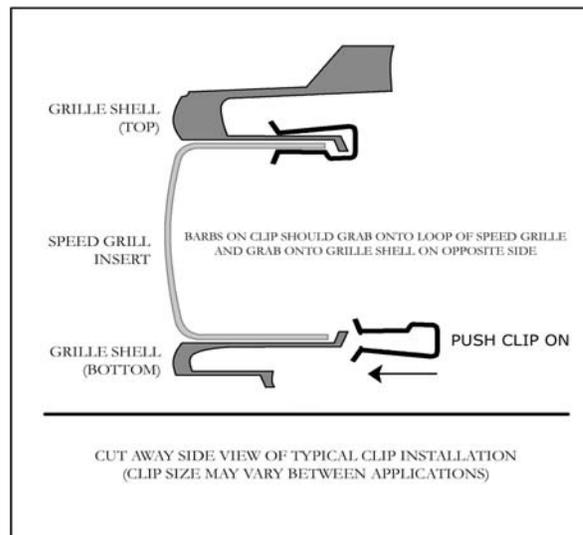

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

7/29/03 SSE 950-77735 & 950-78735