



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-77808 SATIN FINISH
&
950-78808 CHROME FINISH
1998 - 2001
FORD F-150 & EXPEDITION
VALANCE GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Section	1	Instruction Sheet	5	Installation Clips # 71098
1	Got Street Scene Decal	1	Street Scene Emblem	5	Big Tinnerman Nuts
				5	Black Self Drilling Screws

TOOL LIST	
Phillips Screwdriver	

1. Raise front end of vehicle to gain access to the back side of valance.
2. Install the Speed Grille into the valance from the front side of valance.
3. From the back side install clips over the valance edge and over the edge of grille. Use 5 clips on the top side. Install one clip in the center and one on each end and center one between. On the bottom side use the self drilling screws and the tinnerman nuts and install in the same approximate location.
4. Install the Street scene Emblem on the face of the grille. Remove the protective covering.

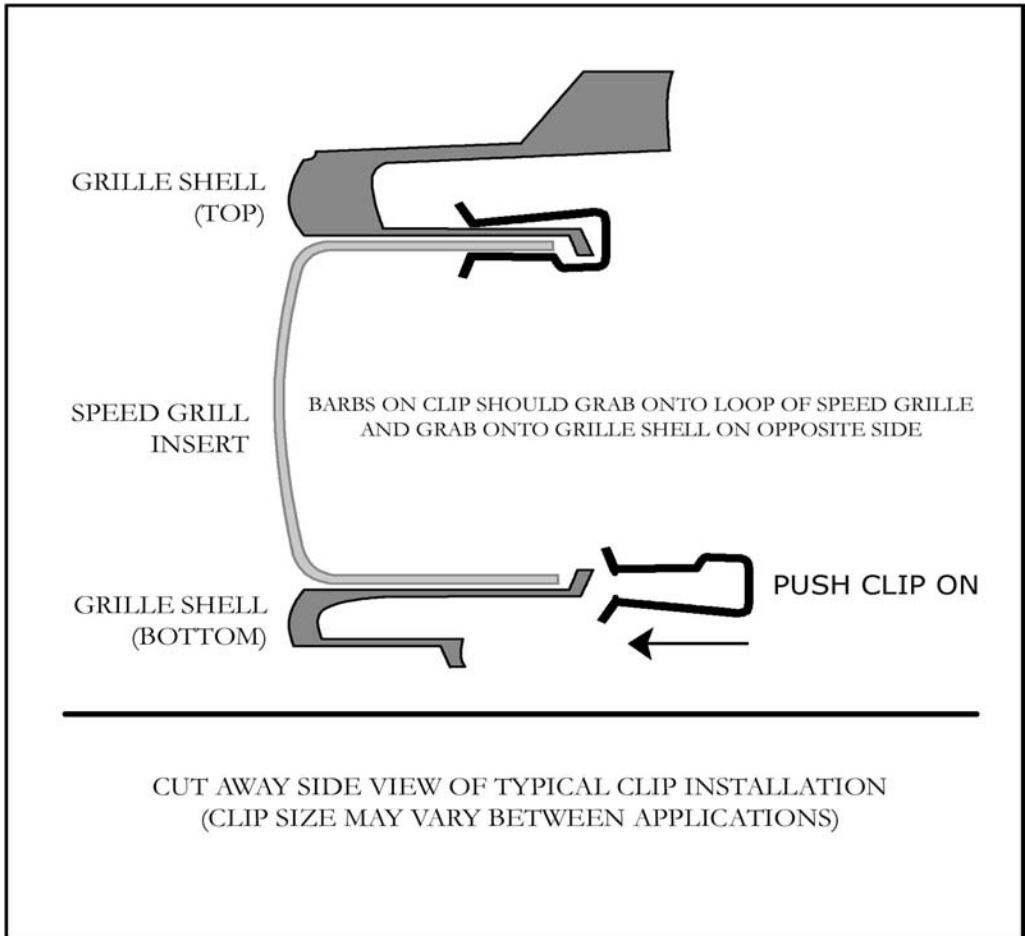

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.