



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77986 SATIN FINISH
950-78986 CHROME FINISH
2008
NISSAN ALTIMA COUPE
MAIN GRILLE
SPEED GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	2	Cable Tie 11" # 10060
1	Care For Grilles	1	Street Scene Emblem		
2	Wide Body Installation Clips # 71092				
6	3/4" Long Installation Clips # 71098				


TOOL LIST	
SM Metric Tool Set, Flat Blade Screwdriver	

1. Remove the front fascia assemble. To do this raise the front of the vehicle and remove eleven fasteners that secure the bottom of fascia to the apron.
2. Turn front wheels right to left and then left to right and reach in and remove the bolt that secures the fascia to the front fender. It will be necessary to push the inner fender in to gain access.
3. Remove the eight fasteners across the top of fascia. Remove fascia.
4. Remove the OEM grille shell from the front fascia. Across the top side there are six mounting points. On each end you will need to squeeze the fastener to release it from the fascia. Pull gently to release the four center fasteners. On the bottom of grille there are six mounting points also. The two outer ones on each side need to be released to remove the grille shell. Pry the center tab up on each to release.
5. Install the Speed Grille insert into the fascia. The top of the Speed Grille will be clipped to the fascia using four of the 71098 clips. Insert the clip through the slotted hole in fascia and over the edge of Speed Grille. See Photos below.

PHOTO 1



PHOTO 2

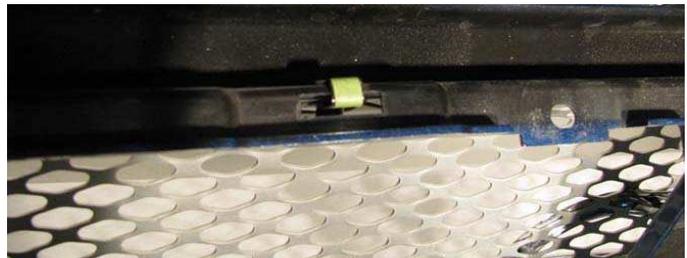

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

04/24/08 SSE 950-77986 & 950-78986

6. Fasten the bottom of the Speed Grille insert by using the two cable ties as shown in the photos below.

PHOTO 3



Cable Ties

PHOTO 4



7. Clip the bottom of Speed Grille to the fascia by inserting the wide clip into the slotted holes in fascia and onto the Speed Grille (The humped side of the clip will go next to the Speed Grille). See photo below.

PHOTO 5



8. Depending on the color of the fascia it may be advised to paint the center vertical bar and the inner areas of fascia black.
9. If you would like to install the Toyota emblem on the Speed Grille you will need to remove the vertical mounting bars on each side located on the back side see photo below. They can be broken off by grabbing the tab with pliers and working back and forth to separate. Insert emblem onto the Speed Grille by aligning the two horizontal bars on the emblem with the holes in grille. From the back side insert the the two extra clips over the tabs. It may be necessary to squeeze the clips with pliers to tighten up the gap prior to installing.
10. Install the front fascia back on vehicle.

PHOTO 6

