



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-79140

STAINLESS STEEL

1999 - 2002 CHEV SILVERADO

TRUCK

&

2000 - 2002 SUBURBAN / TAHOE

MAIN GRILLE

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST

2	Speed Grille Sections	1	Instruction Sheet	26	Long Attaching Clips #71098
1	Got Street Scene Decal	1	Street Scene Emblem	8	Short Attaching Clips #71097

TOOL LIST

Phillips Head Screwdriver , Flat Head Screwdriver

NOTE:

Removal of OEM chrome grids is not required. For a richer contrasting look, we recommend painting the chrome grids satin or flat black on the silverado.

NOTE: USE A SOFT CLOTH AND POLISH TO POLISH BOTH SIDES OF THE GRILLE BEFORE INSTALLATION

1. Remove grille from truck. Open the hood and remove the seven retaining clips the secure the air deflection panel to the grille shell. Remove the fastener at the right of grille center. Using a phillips head screwdriver, turn the four grille securing fastener located just inward of the headlight and parking lights, 1/4 turn counter clockwise. Grasp the grille shell at each end and pull gently to release the retaining fasteners. At the points where the securing fasteners were unlocked, gently pull out and remove grille shell.
2. Set grille shell on a clean covered table or workbench.
3. Remove the Speed Grille inserts from the protective packages. Each of the two Speed Grille sections is labeled for it's proper location.
4. Install the upper Speed Grille section into the upper opening. Gently push the top in first making sure that upper part of the Speed Grille is resting on the top of the chrome ledge. (see illustration.) Using the long clips provided , fasten the bottom part of Speed Grille to the grille shell at each end and left and right of the Chevy bow-tie emblem and one clip centered in between. Using a short clip, fasten the top at each end and between each chrome vertical bar. Clips will go through the open areas on the Speed Grille. Install a clip at each upper corner at a 45 degree angle.


SPECIAL NOTE: On the 2000 - 2002 suburban and tahoe the grille shell is chrome and the grids are black.

5. Install the lower Speed Grille sections into the lower opening. Make sure that the grille insert is fully seated.


Using the remaining clips, fasten the bottom side at each end and between the vertical chrome bars. Fasten the top part of Speed Grille to the grille shell at each end and left and right of the Chevy bow-tie emblem and one clip centered in between. Using a short clip, fasten the top at each end and between each chrome vertical bar. Clips will go through the open areas on the Speed Grille. Install the remaining two clips at each upper corner at a 45 degree angle.


6. Install grille shell back onto truck.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

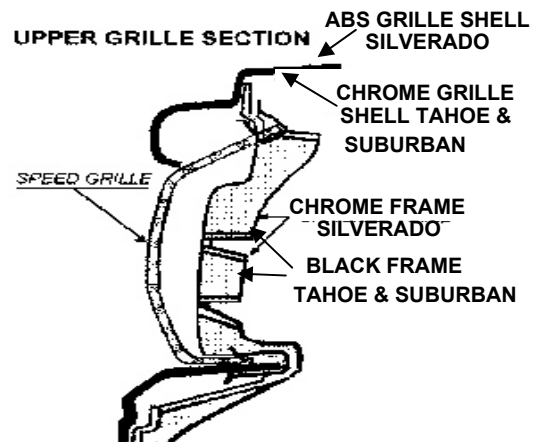

LOWER GRILLE SECTION

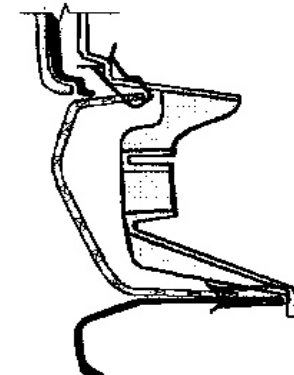

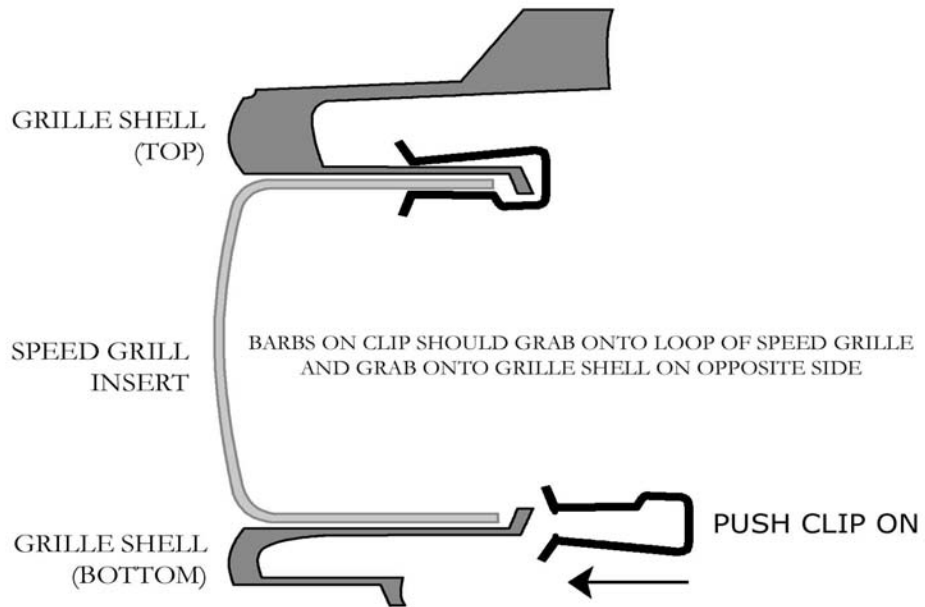

CUT AWAY SIDE VIEW OF TYPICAL CLIP INSTALLATION
(CLIP SIZE MAY VARY BETWEEN APPLICATIONS)