



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
 Costa Mesa, CA. 92626  
 Phone (714) 426-0590 Fax (714) 426-0591

**950-79211**  
**1999 - 2002**  
**CHEVY "S" SERIES**  
**EXTREME**  
**MAIN GRILLE**  
**STAINLESS STEEL**

## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
<b>2</b>	Speed Grille Sections	<b>1</b>	Instruction Sheet	<b>13</b>	Attaching Clips # 71098
<b>2</b>	Ty-Straps	<b>1</b>	Street Scene Emblem	<b>1</b>	Got Street Scene Decal


TOOL LIST
Safety glasses, Side cut pliers

**Note:**

No cutting, drilling or grinding is required, Also this grille does not fit "S" series with RPO YC5 package (chrome front bumper, body side moldings, grille with upper chrome bar).

**NOTE: USE A SOFT CLOTH AND POLISH TO POLISH BOTH SIDES OF THE GRILLE BEFORE INSTALLATION**

1. Before beginning installation be sure to wear proper eye protection.
2. Open hood, Remove the park, turn signal lamps. Holding the lamp assembly in one hand, depress the lever on the bulb assembly and turn counter-clockwise to remove.
3. Remove the grille shell assembly by grasping the upper portion and pulling gently to release the retaining clips. Do the same on the lower portion and remove grille shell from truck.
4. Set the grille shell on a soft, covered clean workbench or table. Remove "Speed Grille" sections from their packages. Each "Speed Grille" section is labeled for it's location.
5. Place the upper "Speed Grille" section into the upper opening of the grille shell. Using eight of the clips provided, clip the "Speed Grille" in from the backside of grille shell with flat side of clip facing away from grille. Locate clips at the top and bottom, outermost corners, and the outermost ends of center cavity. Be sure "Speed Grille" is fully set into the grille shell.
6. Place the lower "Speed Grille" section into the lower opening. Using the remaining five clips install one at the bottom center and one at each end. Install two clips in the center cavity as close to each side as possible. Secure the top side of the lower section by installing 2 clips in the center cavity as close to each side as possible. To fasten the corners use the Ty-straps provided. Pull through loop hole in insert and into horizontal bar of grille shell. Pull tight and cut off remaining end.
7. Reinstall grille shell into truck.

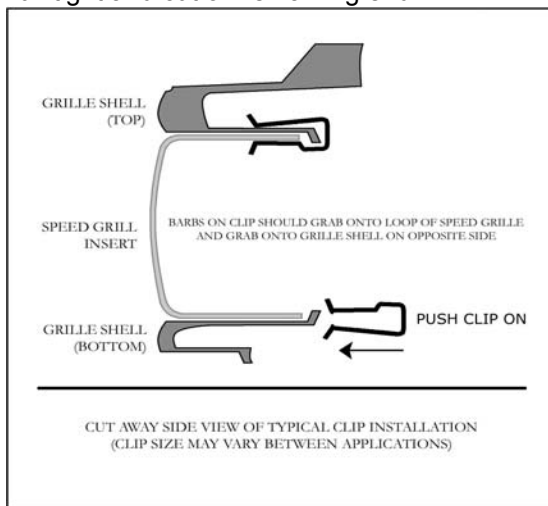

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119, D425,834, D421,585, D420,961, D420,960, D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.