



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-79613
 1997 - 2002
 DODGE DAKOTA / DURANGO
 W / OEM
 FRONT VALANCE
 GRILLE INSERTS
 STAINLESS STEEL

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
4	Speed Grille Sections	1	Instruction Sheet	16	Attaching Clips # 71098
		1	Street Scene Emblem	1	Got Street Scene Decal

TOOL LIST
Safety Glasses

NOTE: USE A SOFT CLOTH AND POLISH TO POLISH BOTH SIDES OF THE GRILLE BEFORE INSTALLATION

1. Before beginning installation be sure to wear proper eye protection.
2. Remove Speed Grille sections from their packages. You will have a driver's side and a passenger side and both centers are the same.
3. Install the Speed Grille sections into their proper location of valance from the front side.
4. Attach from backside with 4 attaching clips per section. Two on top and two on the bottom.
5. Make sure the Speed Grille section are positioned properly and the barbs on the clips are locked into holes in the Speed Grille.

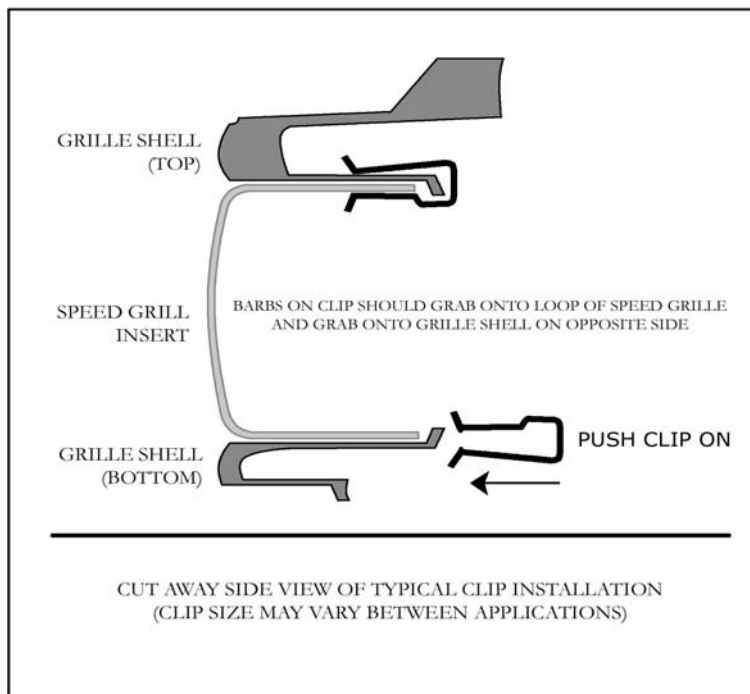

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.