



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


**950-77750 SATIN FINISH
 &
 950-78750 CHROME FINISH
 SPEED GRILLE
 1999 - 2000
 FORD F-250 & F-350
 MAIN GRILLE**

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Upper Grille Section	1	Center RH Grille Section	1	Outer RH Grille Section
1	Lower Grille Section	1	Center LH Grille Section	1	Outer LH Grille Section
16	71098 Attaching clips "B"	28	71095 Attaching Clips "A"	1	Instruction Sheet
		1	Street Scene Emblem	1	Got Street Scene Decal

TOOL LIST
7mm Wrench Or Socket Assemble

1. Before beginning installation be sure to wear proper eye protection.
2. Open hood.
3. Remove factory grille shell by removing the four 7mm attaching screws across the top. Grasp the grille on the bottom side and pull to release the four " Snap In " retaining clips.
4. Set the grilleshell on a clean covered work bench or table.
5. Remove the Speed Grille inserts from their packages. Each grille sections is labeled for it's location.
6. Refer to the illustration for location of attaching clips. Insert one grille section at a time and attach. Gently work grille insert into opening, applying pressure evenly across the grille face. If clips do not reach grille inserts, speed grille is not installed deep enough into opening. Attaching clips marked " A " are the long clips and clips marked " B " are the shorter. Install all clips with flat side away from grille.
7. Reinstall grille shell into truck.

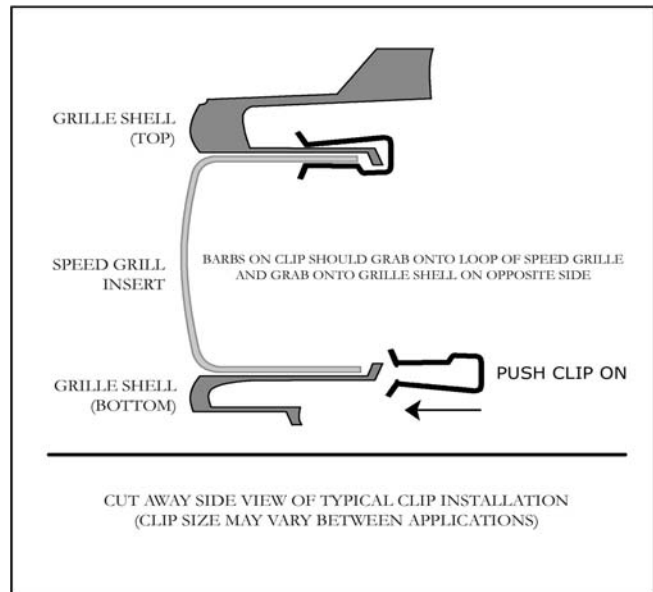


THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

**OVER
 FOR ILLUSTRATION**

950-77750 & 950-78750

ATTACHING CLIP PLACEMENT

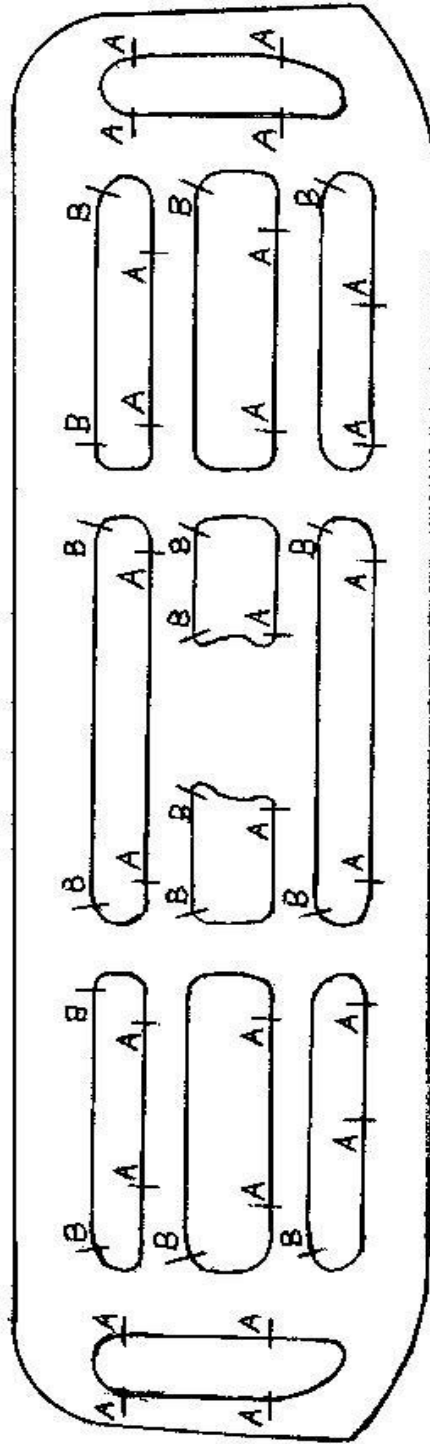

REAR VIEW