



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-80172

2011

CHEVY SILVERADO HD

LOWER VALANCE

GRILLE BILLET

### INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.


PARTS LIST					
1	Billet Insert		Instruction Sheet	2	Brackets With Bolts In One End
2	1/4" Nyloc Nuts	2	Phillips Screws	2	Tinnerman Nuts

TOOL LIST	
Phillips Screwdriver, 7/16 Wrench Or Socket	

1. Remove license plate and pull plastic from inner bumper. Use two existing holes in metal bumper and place the L bolt bracket inside. See photo below.



2. Picture shows where brackets should be located. (From Bottom Of Vehicle). Place grille into bumper slot and fasten to bracket using # 8 Screws and Tinnerman Nuts.

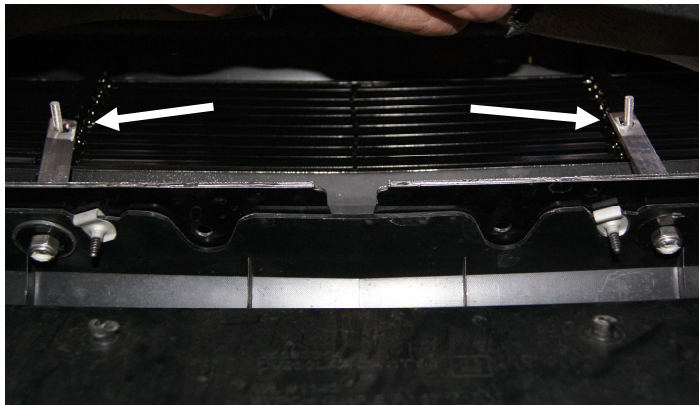

3. Check new grille for firmness and loose hardware prior to driving.

