



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, CA. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-94178

2014-2015 CHEVY SILVERADO

1500 (NOT FOR 2500/3500HD)

RUGGED GRILLE INSERT

BLACK POWDER COAT


### INSTALLATION INSTRUCTIONS

**VERY IMPORTANT!** Read and understand all directions and check the following parts list before starting installation.


PARTS LIST					
1	2PC Rugged Grilles	1	Instruction Sheet	16	L Brackets
16	Nuts				

TOOL LIST	
Various Screwdrivers and Socket Wrenches.	


1. Open hood and remove plastic cover by removing the (12) self retaining clips. You can do so by prying the clips with a flat head screwdriver.

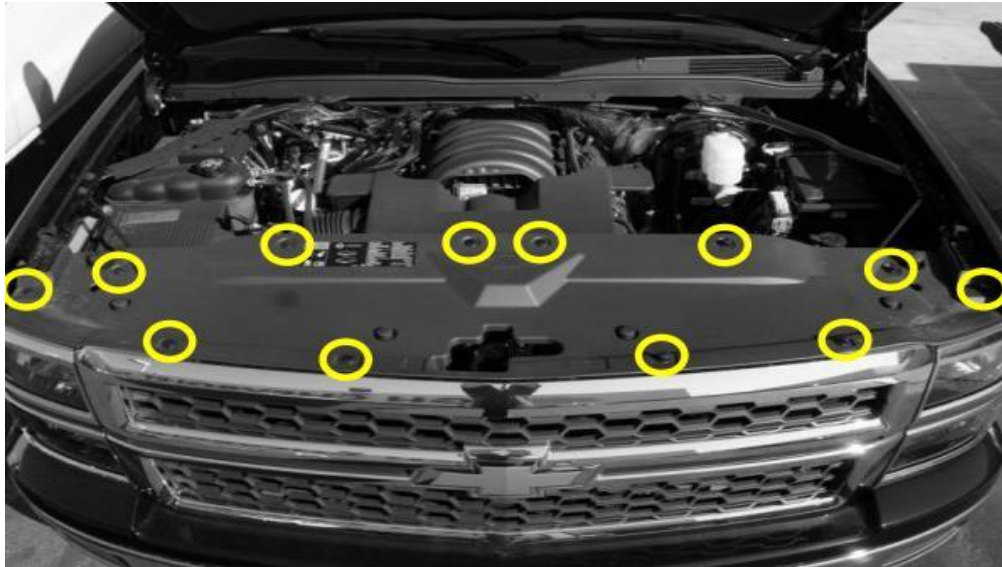

2. With a 10MM socket, remove the 4 bolts from the top of the grille.

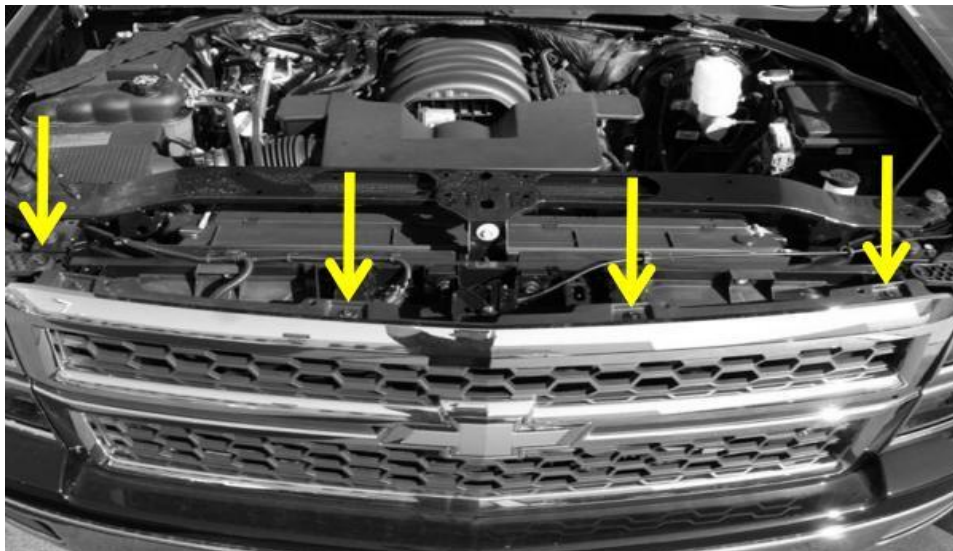

3. Now remove (2) 7MM screws from the inside of the wheel wells, in order to remove the front plastic piece in front of the bumper.

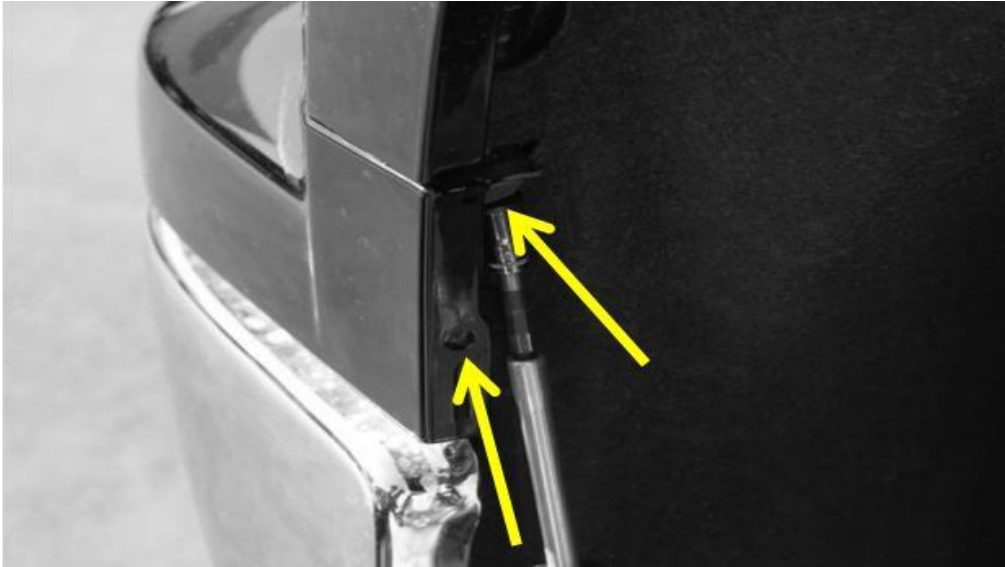


4. Use of a plastic pry tool is to push down on clips while simultaneously pulling back on the bumper piece and remove completely from front of vehicle. SEE STEP (5)



5. From underneath of front bumper, use a pry tool to unclip the 4 clips directly underneath the grille shell.



6. Place grille on protected surface and place the top piece of the grilles into the opening. Red circles show where hardware mounting points.

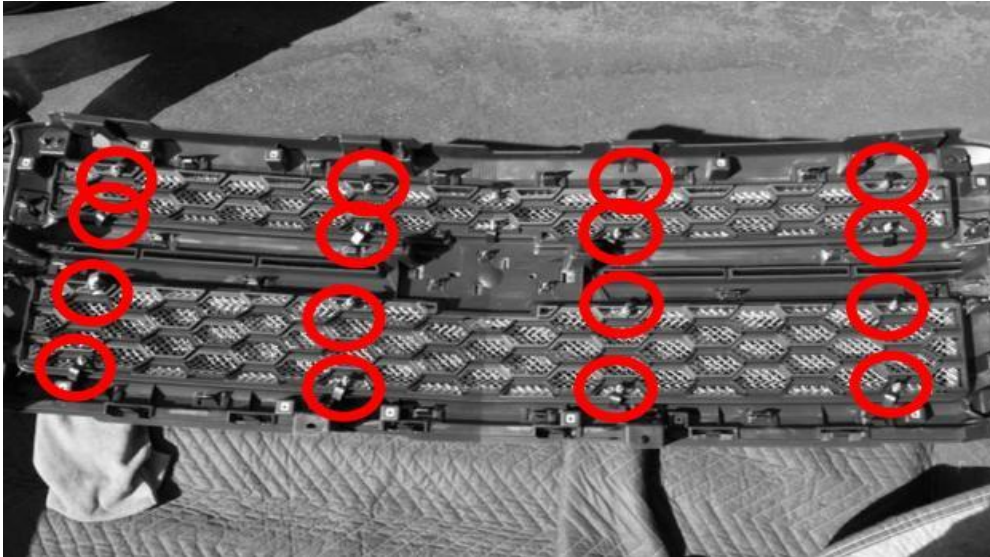

7. Place the "C" bracket as shown and use the lock nut to fasten the grill. Make sure it is secure and DO NOT over tighten. (Repeat Step 5 and 6 for bottom grille)



8. Install the grille shell back onto your truck, using steps 4-1. Check new grille, grille shell, and front bumper plastic piece for firmness and loose hardware prior to driving.
9. Done. Enjoy your RUGGED Street Scene grille inserts!