



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, CA. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-94523

2011-2013 DODGE RAM

2500/3500HD SERIES TRUCK

RUGGED GRILLE INSERT

BLACK POWDER COAT

INSTALLATION INSTRUCTIONS

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST

1	Upper Billet Insert	1	Instruction Sheet	4	L-Brackets
1	Lower Billet Insert	4	10-32 Nylock Nuts	4	1 1/2" Hooks

TOOL LIST

Various Screwdrivers and socket wrenches.

1. The center cross bar and all horizontal bars will be cut away. Leave a 1/4" tab on top and bottom section of the center bar.

NOTE: WE RECOMMEND REMOVING THE O.E. GRILLE SHELL FROM THE VEHICLE, BY REMOVING BOLTS SECURING IT TO FRONT OF VEHICLE.



2. Leave a 1/4" lip on the four center cross bars. The new grille insert will rest on here.




3. Your grille should look like this, when finished with cutting. Now line up your new grille to to the front of the

grille shell so that it sits flush in the opening, and place on a protected surface.



4. The longer bolts on the grille will be the ones used to install the brackets and nyloc nut. Step 5 shows a close up of how to install bracket.

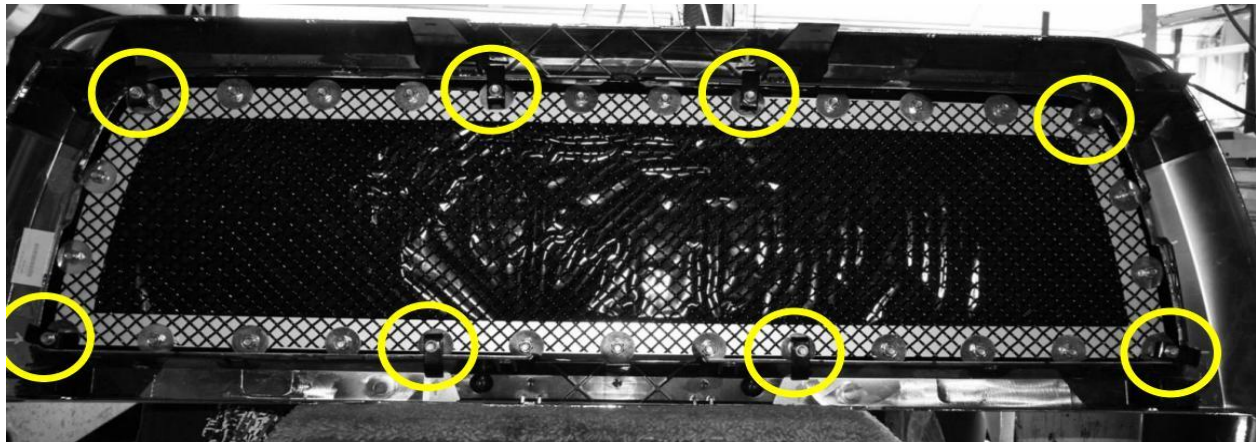

5. Place all 8 nuts and brackets in corresponding points before securing to shell. Do not over tighten.



6. Check new grille for firmness and loose hardware prior to driving.
7. Done! Enjoy your RUGGED Street Scene grille insert!